

The Intermec logo is displayed in a dark blue, sans-serif font. It is positioned to the left of a square icon and is partially overlaid by a large, light blue circular graphic element that consists of several overlapping rings and a central dot, resembling a stylized atom or a network diagram.

Intermec



User's Guide



**EasyCoder PM4i
Bar Code Label
Printer**
(IPL Version)

Intermec Printer AB

Idrottsvägen 10

P.O. Box 123

S-431 22 Mölndal

Sweden

Service support: +46 31 869500

The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and/or service Intermec manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec.

Information and specifications in this manual are subject to change without notice.

© 2003 by Intermec Printer AB

All Rights Reserved

EasyCoder, EasyLAN, Fingerprint, and LabelShop are registered trademarks of Intermec Technologies Corp. The word Intermec, the Intermec logo, InterDriver, PrintSet, and Duratherm are trademarks of Intermec Technologies Corp.

The name Centronics is wholly owned by GENICOM Corporation.

Kimdura is a registered trademark of Kimberly Clark.

Microsoft is a registered trademark of Microsoft Corporation.

Torx is a registered trademark of Camcar Division of Textron Inc.

TrueDoc is a registered trademark of Bitstream, Inc.

TrueType is a trademark of Apple Computer Inc.

Unicode is a trademark of Unicode Inc.

Valeron is a registered trademark of Valéron Strength Films, an ITW Company.

Windows is a trademark of Microsoft Corporation.

Throughout this manual, trademarked names may be used. Rather than put a trademark (™) symbol in every occurrence of a trademarked name, we state that we are using the names only in an editorial fashion, and to the benefit of the trademark owner, with no intention of infringement.

Contents

| | |
|---|------|
| FCC Notice (U.S.A.) | vii |
| DOC Notice (Canada) | vii |
| GS Notice (Germany) | vii |
| EU Standard EN 55022 (The European Union) | vii |
| Declaration of Conformity (CE) | viii |

1 Introduction

| | |
|---|---|
| Description of EasyCoder PM4i Printer | 2 |
| Safety Summary | 3 |
| Product Identification | 3 |

2 Installation

| | |
|-------------------------------|----|
| Unpacking the Printer | 6 |
| Front View | 7 |
| Rear View | 8 |
| Media Compartment | 9 |
| Description | 9 |
| Media Supply Roll Post | 10 |
| Print Mechanism | 11 |
| Connections | 12 |
| Power | 12 |
| Computer | 12 |
| Controls and Indicators | 13 |
| Control Lamps | 13 |
| Display | 14 |
| Keyboard | 14 |
| Beeper | 14 |

3 Starting Up

| | |
|--------------------------------|----|
| Switching On the Printer | 16 |
|--------------------------------|----|

4 Media Load

| | |
|-----------------------------------|----|
| Tear-Off (Straight-through) | 18 |
| Peel-Off (Self-strip) | 22 |

Cut-Off..... 27
External Supply (Fanfold) 31

5 Thermal Transfer Printing

Ribbon Load..... 34

6 Setting Up the Printer

Description..... 40
Default Setup..... 41
Setup Parameters..... 42
 Serial Communication..... 42
 Baud Rate 42
 Character Length 42
 Parity..... 42
 Stop Bits..... 43
 Protocol 43
 Test/Service 45
 Testprint..... 45
 Data Dump..... 46
 Memory Reset..... 46
 Media 47
 Media Type 47
 Paper Type..... 47
 Label Length 47
 Sensitivity..... 47
 Darkness 48
 Label Reset Point..... 48
 Form Adj Dots X 48
 Form Adj Dots Y..... 48
 Configuration..... 49
 Label Taken Sensor..... 49
 Emulation 49
 Print Speed..... 49
 Cutter 49

7 Setup Mode

Navigating in Setup Mode 52
Setup Mode Overviews 54

| | | |
|-----------|---|----|
| 8 | Options | |
| | Introduction | 60 |
| | Integral Liner Takeup Unit..... | 61 |
| | Paper Cutter..... | 61 |
| | Media Supply Hub..... | 61 |
| | Media Roll Retainer | 61 |
| | 3-inch Adapter | 61 |
| | Label Taken Sensor | 61 |
| | Internal Fan-Fold Guide | 62 |
| | Side Door with Keylock | 62 |
| | Paper Sensor..... | 62 |
| | Thick Media Printhead | 62 |
| | Interface Boards | 62 |
| 9 | Troubleshooting | |
| | Troubleshooting List | 64 |
| 10 | Maintenance | |
| | Printhead Cleaning | 68 |
| | External Cleaning | 71 |
| | Cleaning the Media Guides..... | 72 |
| | Printhead Replacement | 73 |
| | Media Jams | 76 |
| 11 | Adjustments | |
| | Narrow Media Adjustment..... | 78 |
| | Label Stop Sensor Position Adjustment | 79 |
| | Printhead Pressure..... | 80 |
| | Ribbon Break Shaft..... | 81 |
| A | Technical Specifications | |
| | Technical Data | 84 |
| B | Media Specifications | |
| | Media Roll Size | 88 |
| | Media | 89 |
| | Non-Adhesive Strip | 89 |

| | |
|------------------------------|----|
| Self-Adhesive Strip..... | 90 |
| Self-Adhesive Labels..... | 91 |
| Tickets with Gap | 93 |
| Tickets with Black Mark..... | 95 |

C

Interfaces

| | |
|---------------------------|----|
| RS-232 Interface..... | 98 |
| Optional Interfaces | 99 |

D

Supported IPL Commands

| | |
|--------------------------------|-----|
| Commands and Syntax List | 102 |
|--------------------------------|-----|

E

Intermec Supplies

| | |
|---|-----|
| Direct Thermal Media..... | 108 |
| Thermal Transfer Media..... | 109 |
| Transfer Ribbons..... | 110 |
| Setting the Media Sensitivity Number..... | 111 |

FCC Notice (United States of America)

WARNING

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

DOC Notice (Canada)

Canadian Dept. of Communication

REGULATIONS COMPLIANCE (DOC-A)

This digital apparatus does not exceed the class A limits for radio noise emissions from a digital apparatus as set out in the radio interference regulations of the Canadian Department of Communication.

Ministère des Communications du Canada

CONFORMITE DE REGLEMENTS (DOC-A)

Le présent appareil numérique n'émet pas de bruits radio-électriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le règlement sur brouillage radioélectrique édicté par le Ministère des Communications du Canada.

GS Notice (Germany)

ALLGEMEINE VORSCHRIFT

Reparaturen oder sonstige Eingriffe, die sich nicht auf normale Bedienung der Maschine beziehen, dürfen ausschließlich nur von einem ausgebildeten, zuständigen Fachmann vorgenommen werden.

EU Standard EN 55022 (The European Union)

WARNING

This is a Class A ITE product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Declaration of Conformity (CE)

We,
Intermec Printer AB
Box 123
S-431 22 Mölndal
Sweden

declare under our sole responsibility¹ that the product

EasyCoder PM4i

to which this declaration relates is in conformity
with the following standards

EMC:
EN 61000-6-4:2001
EN 61000-6-2:2001

Electrical Safety:
EN 60 950

following the provisions of Directives


89/336/EEC and 73/23/EEC

Mölndal 2003-03-12



.....
Per-Ove Jacobsson

^{1/}. Intermec assumes no responsibility regarding the CE Directive if the printer is handled, modified, or installed in other manners than those described in Intermec's manuals.

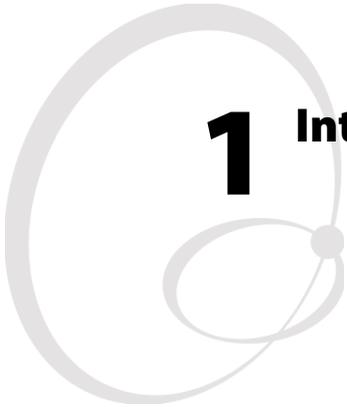

1 Introduction

This chapter introduces the EasyCoder PM4i printer. The chapter covers the following topics:

- Description of EasyCoder PM4i
- Safety summary
- Product identification

Description of EasyCoder PM4i Printer

The EasyCoder PM4i is a sturdy thermal transfer printer with a print-head resolution of 8 dots/mm = 203.2 dot/inch and a maximum print width of 104 mm (4.095 inches). It offers a large number of useful features, such as:

- Flash memory SIMMs for firmware, fonts, bar codes, and application programs
- Built-in CompactFlash memory card adapter for firmware upgrading
- Built-in RS-232 interface
- Provision for extra interface boards including wired and wireless EasyLAN connections
- Keyboard and display with backlight for improved user interface.

A large number of factory-installed or field-installable options are available, so the printer can be configured for a wide range of applications. See Chapter 9 and Appendix A for more information.

The EasyCoder PM4i supports the Intermec Programming Language (IPL v2.10). A version of EasyCoder PM4i, that supports Intermec Fingerprint v8.10, is described in a special User's Guide.

Safety Summary

Intermec assumes no responsibility regarding the CE Directive if the printer is handled, modified, or installed in any way other than that described in Intermec's manuals.

- Read this manual carefully before connecting the printer.
- Moving parts are exposed when the side doors are open, so ensure that the doors are closed before you operate the printer.
- Do not open the front/left-hand cover. Dangerous voltage!
- Do not remove the bottom plate. Dangerous voltage!
- Do not put your fingers inside the print mechanism when the power is on.
- Make sure that the side door cannot unintentionally swing down when you have your fingers or hands inside the media compartment. Risk of injury because of the weight of the side door!
- Place the printer on an even surface which can support its weight of approximately 13.5 kg (30 pounds) plus supplies.
- Do not spray the printer with water. If you are using a hose to clean the premises in an industrial environment, remove the printer or protect it carefully from spray and moisture.
- Carefully read the warning text on the envelope before using a cleaning card.

Product Identification

The machine label is attached to the printer's rear plate and contains information on type, model, and serial number as well as AC voltage. It also contains various signs of approval.



2 Installation


This chapter explains how to unpack and install the EasyCoder PM4i and also describes the printer's various parts in detail. It covers the following topics:

- Unpacking the printer
- Parts on the printer's front
- Parts on the printer's rear plate
- Parts in the media compartment
- Parts in the print mechanism
- Connecting the printer
- Using the controls and understanding the indicators


Unpacking the Printer

Before you install the printer, examine the package for possible damage or missing parts:


- Open the box and lift the printer out.
- Check that the printer has not been visibly damaged during transportation. Keep the packing materials in case you need to move or reship the printer.
- Check the label on the printer's rear plate, which gives the voltage, the part number, and the serial number.
- Check that any options you ordered are included.
- Check that all the accessories are included. As standard, the box contains:
 - Intermec EasyCoder PM4i printer
 - Power cord
 - Quality check card
 - Cleaning card
 - High edge guide for media supply post
 - Short strip of labels
 - Starter pack of thermal transfer ribbon
 - This User's Guide
 - Supporting software and product information on CD.
- Check that the power cord is appropriate for the local standard. The printer works within 90 to 265 VAC, 50 to 60 Hz.

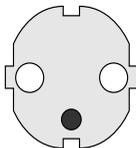

*European-type
230 VAC plug*

 

*US/Canadian-type
115 VAC plug*

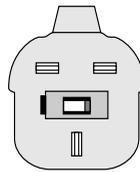

*GB-type
230 VAC plug*


If the printer has been damaged in any way during transportation, complain to the carrier immediately.

If the delivery is incorrect or any parts are missing, report it immediately to the distributor.

Front View


At the front of the printer are the display window, the control lamps, and the keyboard. These features allow the operator to control and set up the printer manually.

The printed labels, tickets, or tags are presented at the front of the print mechanism, which is covered by a door.

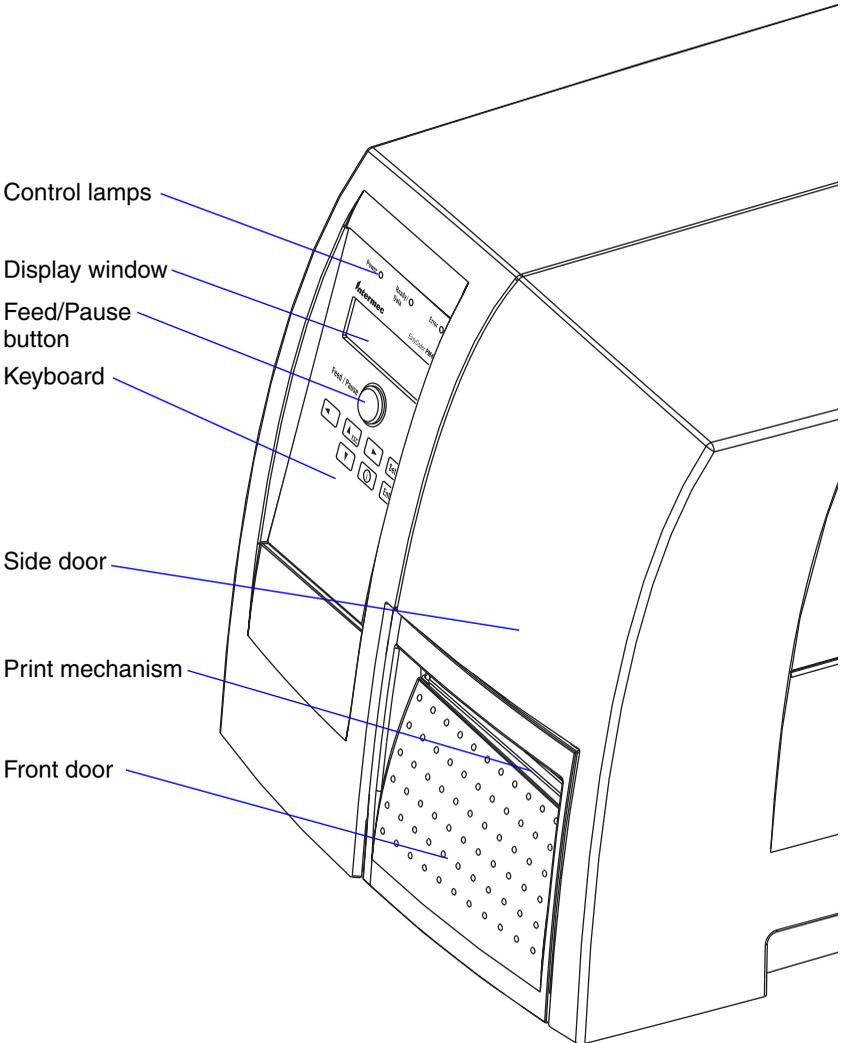

Rear View

The rear plate contains the On/Off switch, the AC power cord socket, and various interface connectors and slots.

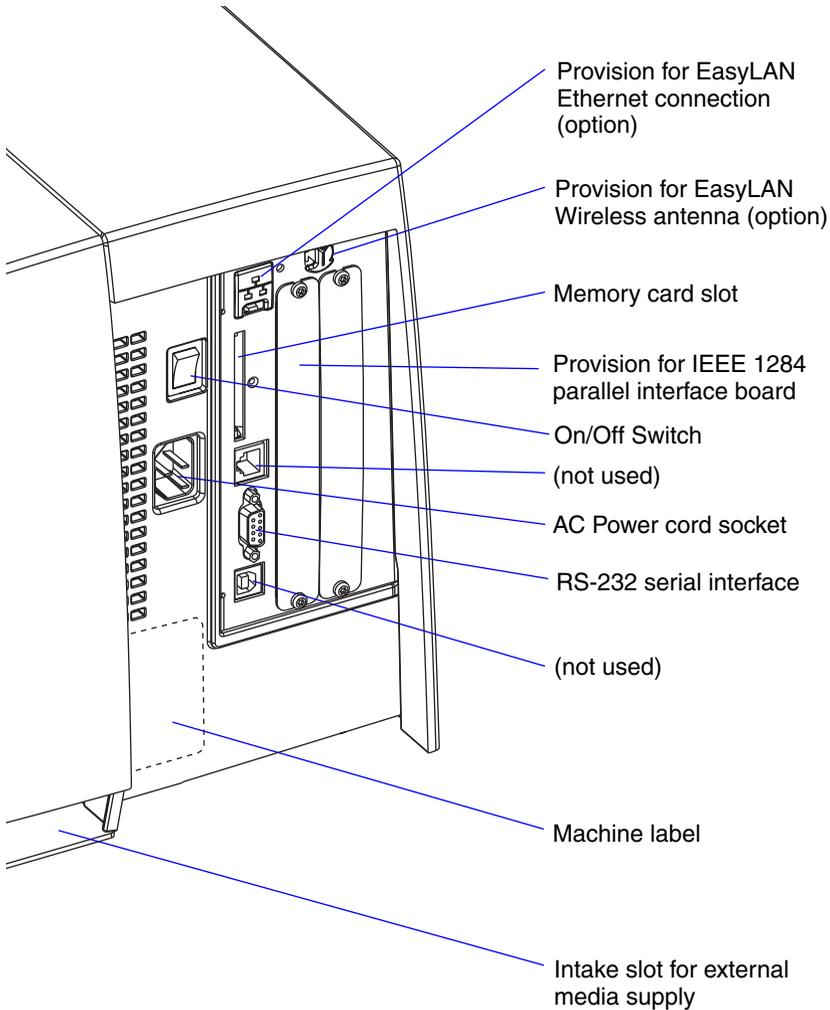


Media Compartment

Description

The media compartment is completely covered by a door that can be opened 180° upwards to provide full access for media and ribbon load and has an inspection window for checking the media and transfer ribbon supplies.

The media can be supplied from a post or, optionally, from an external supply of fan folds behind the printer using an internal media guide device. There is also an optional rotating media supply hub. Also see Chapter 9, “Options.”

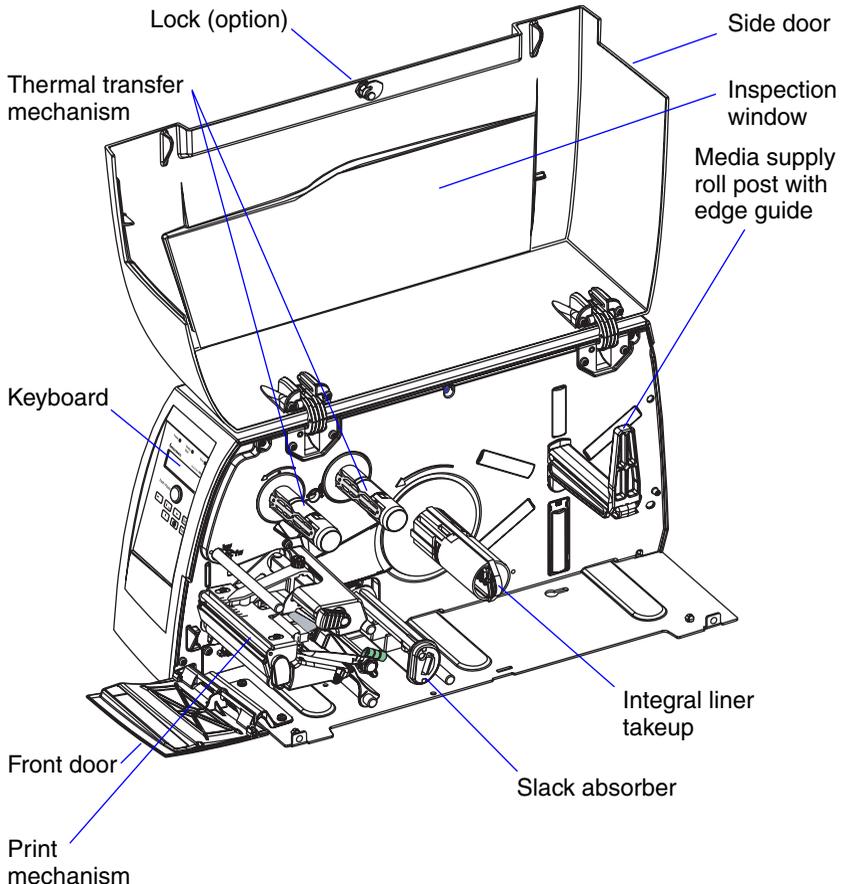


Media Supply Roll Post

The media supply roll post fits both 38-40 mm (1.5 inches) and 76 mm (3.0 inches) cores because it can be moved up or down in a slot in the center section. The bottom position is intended for small cores and the top position is for large cores. The post is locked by a straight-slot screw.

The post has a moveable edge guide to fit various media widths. As standard, a low guide is factory-fitted on the post and a high guide is packed separately with the other printer accessories. When switching the edge guide, be careful not to break it. In this manual, the high edge guide is generally illustrated.


When the edge guide is in its outermost position, it can be tilted down to a horizontal attitude to allow removal of the empty core and loading of a new media roll. After loading the media roll, tilt up the edge guide and push it inwards so the media roll becomes flush with the center section. The low edge guide allows media rolls with 3-inch cores to be loaded without tilting down the guide.

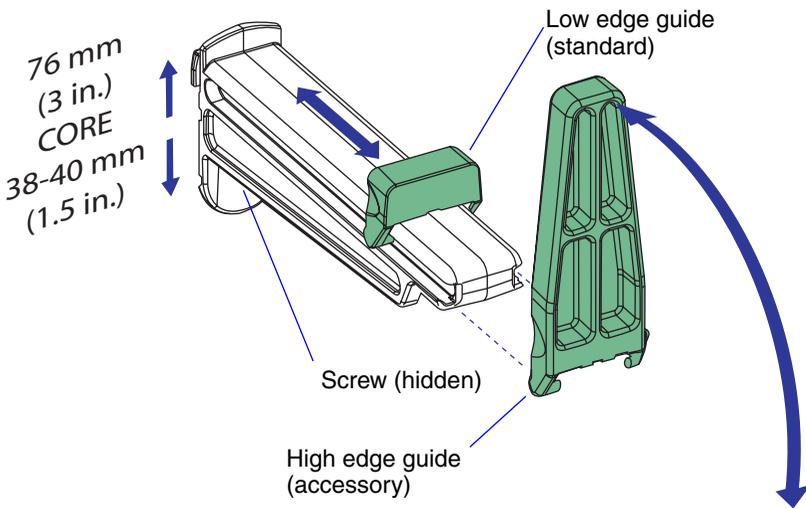

Optionally, the printer can be fitted with an 1.5-inch rotating media supply hub instead of a post and a paper sensor, which detects when the remaining amount of media has reach a level specified in the Setup Mode. There are also a 3-inch adapter and a label roll retainer. Another option is an internal guide for media placed behind the printer (for example fan-folds). For illustrations, see Chapter 8 “Options”.

Print Mechanism

The print mechanism features a high-performance thermal printhead with quick-mount fittings to facilitate replacement.

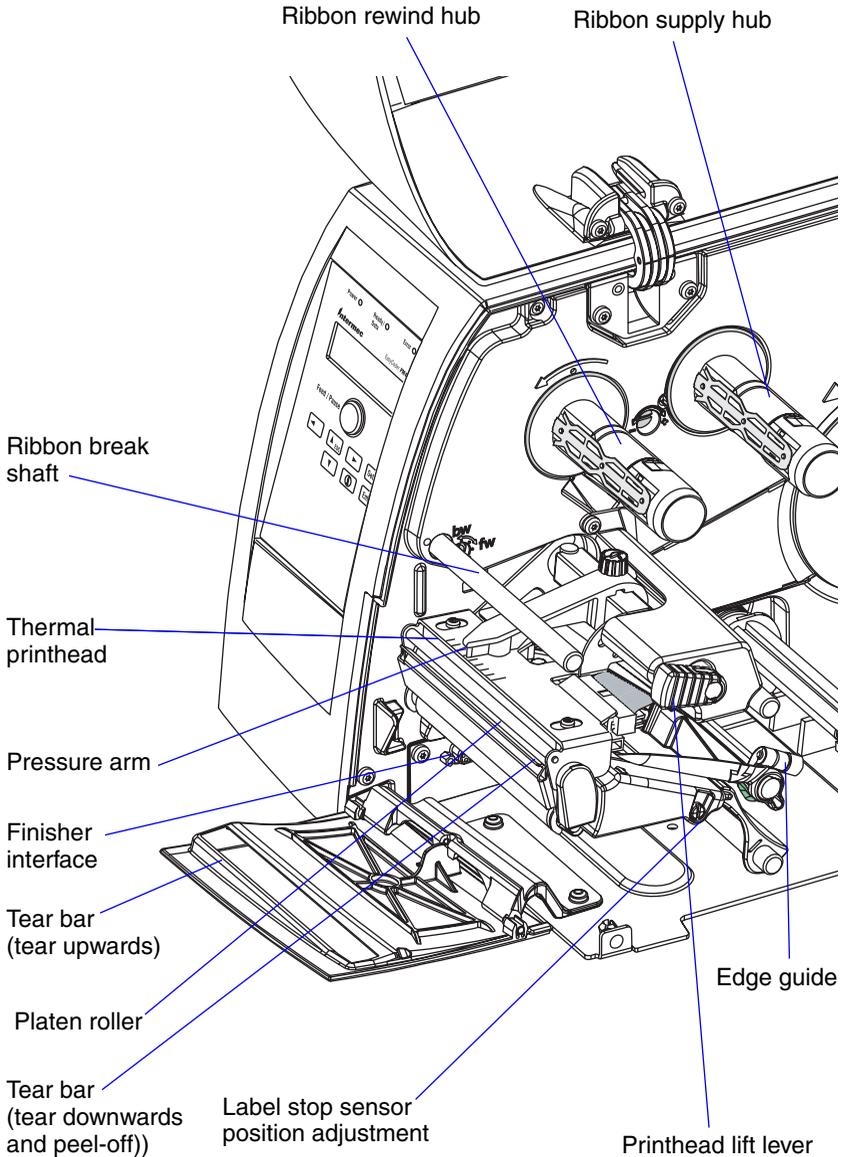

Connections

Power

- 1 Place the printer on a level surface, near an AC outlet. You should be able to easily access the printer to load media and to remove the printout.
- 2 Check that the printer is switched off.
- 3 Connect the power cord from the socket on the rear plate to an electrical outlet (90 to 265 VAC).

Computer

The EasyCoder PM4i is fitted with one 9-pin D-style subminiature (DB9) socket for the RS-232 serial interface port (see Appendix C).

RS-232 Serial Interface

Before you can use the serial interface, you may need to set up the communication parameters, such as baud rate, parity, etc. as described in Chapter 6, “Setting Up the Printer.”

Optional Interface and Network Boards


Several types are available (see Chapter 9, “Options”). Refer to Appendix C and the separate documentation delivered with the boards for connection and setup instructions.

The printer scans all communication ports for incoming data and automatically switches to that port.

Switch off both PC and printer before connecting them together.

Controls and Indicators

The EasyCoder PM4i has several ways of communicating directly with its operator: three control lamps, a display window, a membrane-switch keyboard with 8 keys and buttons on the printer's front, and a beeper.

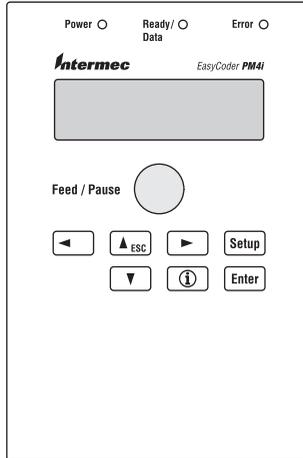

Control Lamps

The control lamps are colored LEDs (Light Emitting Diodes) and are used for the following purposes:

- Power (green) indicates that the power is on.
- Ready/Data (solid green) indicates that the printer is ready.
Ready/Data (flashing green) indicates that the printer is receiving or transmitting data.
- Error (solid red) indicates that an error is detected.
Error (off) indicates that the printer is OK

Display

The display window contains an LCD (Liquid Crystal Display) with background illumination and two lines of text, each with 16 characters. It shows a message when certain errors occur and guides the operator through upgrading, startup, and setup.

The following errors are reported:

| Error | Displayed message |
|-------------------|--------------------------|
| Printhead too hot | Printhead hot |
| Empty/Paused | Paused |
| Out of media | Paper out |
| Out of ribbon | Ribbon out |
| Printhead lifted | Print Head UP/Press Feed |
| Cutter error | Open&shut cutter |

Keyboard

The keyboard is of the membrane-switch type and has 7 keys. The keyboard is supplemented by a large “Feed/Pause” button. Some keys have hard-coded functions in the startup and setup modes.

| | |
|---|---|
|  | Feed/Pause a print job. Repeat last printed label. |
|  | Enter the Setup Mode (see Chapter 7). |
|  | Show communication settings in the display window. |
|   | Browse between communication channels after having pressed the <i> key. |

Keyboard Color Code

| | |
|--------|--|
| Yellow | Operation of the printer (operator level) |
| Green | Setup or service (site or service technician level) |
| White | Data input to printer (operator or technician level) |

Beeper

The beeper acknowledges that a key has been pressed. Optionally, an audible alarm can be enabled using an IPL command. It will start beeping at paper out and ribbon out and continue beeping until the start of reload.



3 Starting Up

This chapter explains how to start up the printer after installation or after having been switched off.

Switching On the Printer

Before switching on the printer, make the necessary connections, insert any memory card you want to use, and check that the printhead is engaged.

Switch on the power using the On/Off switch on the rear plate. The “Power” control lamp on the front panel lights up when the power is on. Wait for a few moments, while the printer loads the program and runs some self-diagnostic tests:

```
Starting
■ ■ ■ ■ ■ ■
```


After a short time, the printer is initialized. The progress of the initialization is indicated by an increasing number of colons on the lower line in the display:

```
Initializing
:::
```

When the initialization is completed, a label is fed out. The following message appears, indicating that the printer is ready for operation.

```
IPL 2.10
```

The message indicates the IPL version number.

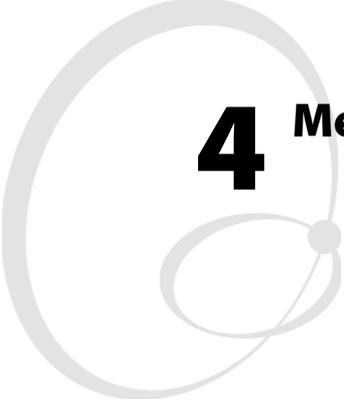

4 Media Load

This chapter explains how to load the printer with media, that is labels, tickets, tag, or strips, for the following modes of operation:

- Tear-Off (straight-through)
- Peel-Off (self-strip), requires optional integral self-strip unit with liner takeup
- Cut-Off (requires optional cutter)
- External supply (fan-folds), fan-fold guide available as option

Tear-Off (Straight-through)

The EasyCoder PM4i can print on labels, tickets, tags, and continuous stock in various forms. This section describes the case when the media is torn off manually against the printer's tear bar. This method is also known as "straight-through printing."

Tear-off can be used for:





- Non-adhesive continuous stock
- Self-adhesive continuous stock with liner
- Self-adhesive labels with liner
- Tickets with gaps, with or without perforations
- Tickets with black marks, with or without perforations

An optional label taken sensor can hold the printing of the next copy in the batch until the present copy has been removed, see Chapter 8, "Options."







Note: Save the label indicating the sensitivity number attached to the media roll. You will need this number to set the media sensitivity, see Appendix E.




Tear-Off, cont.
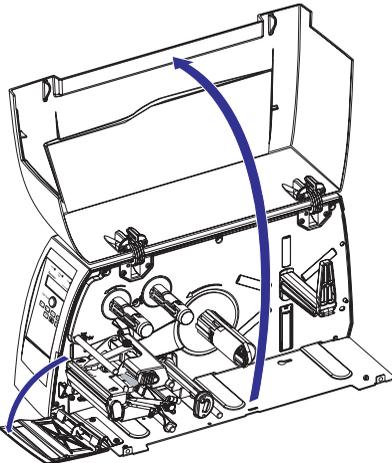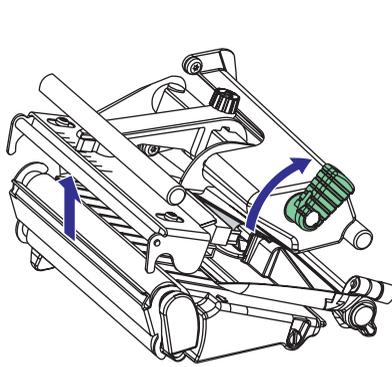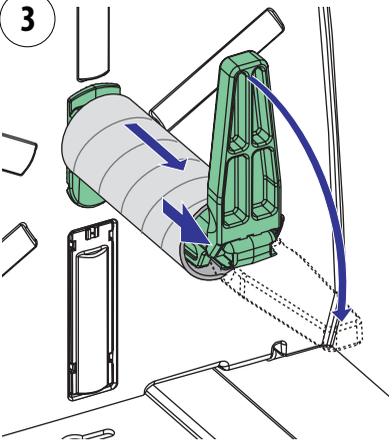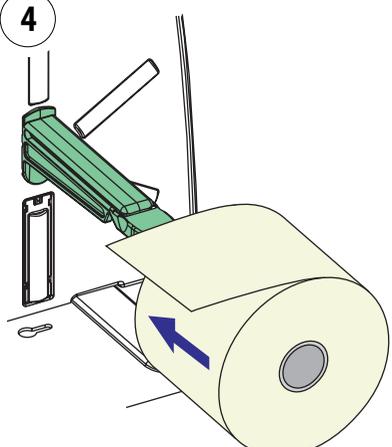
| | |
|--|--|
| <p>1</p>  <p>Open the front and side doors.</p> | <p>2</p>  <p>Turn the printhead lift lever clockwise to raise the printhead.</p> |
| <p>3</p>  <p>Pull out the edge guide as far as it goes and fold it down to a horizontal position. Remove any empty core from the media supply roll post.</p> | <p>4</p>  <p>Fit a new roll of media on the supply post. Fold up and adjust the edge guide so the roll becomes flush with the center section.</p> |

Tear-Off, cont.
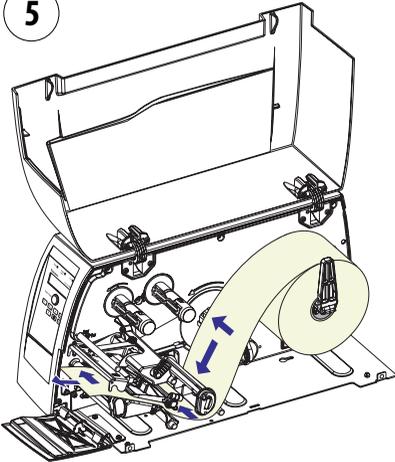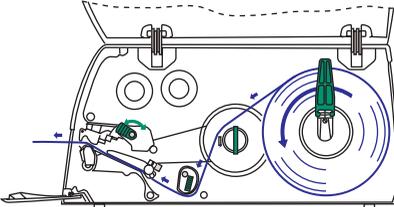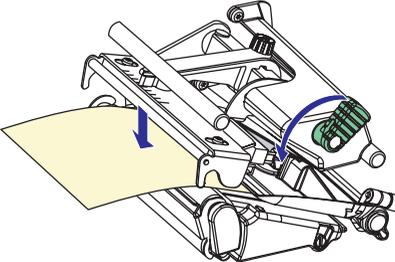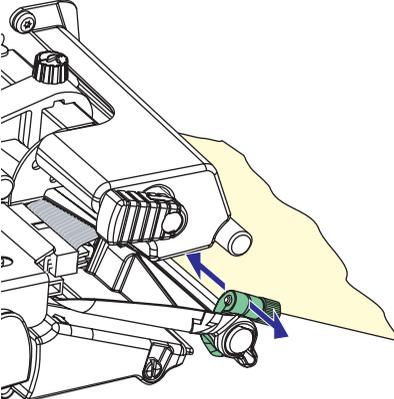
| | |
|--|---|
| <p>5</p>  <p><i>Route the media through the print mechanism and push it towards the center section as far as it goes.</i></p> | <p>6</p>  <p><i>This diagram shows the media path.</i></p> |
| <p>7</p>  <p><i>Turn the printhead lift lever counter-clockwise to engage the printhead.</i></p> | <p>8</p>  <p><i>Adjust the position of the green edge guide so the media is guided with a minimum of play. Lock with the nut.</i></p> |

Tear-Off, cont.
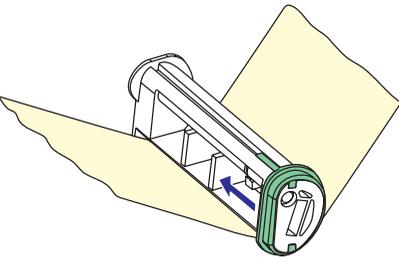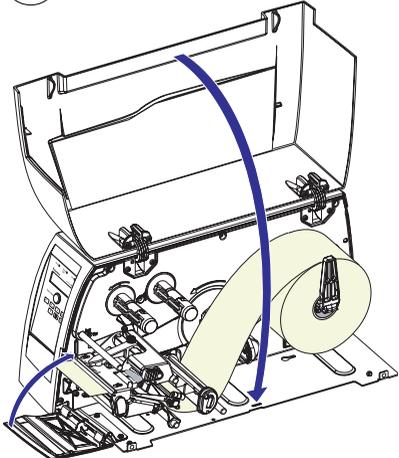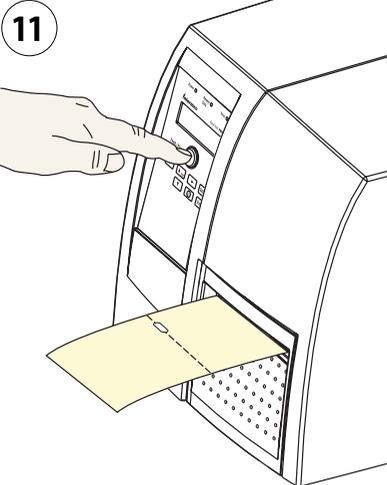
| | |
|--|---|
| <p>9</p>  <p><i>Adjust the position of the edge guide on the label slack absorber according to the width of the media.</i></p> | <p>10</p>  <p><i>Close the front and side door, making sure that the media runs through the slot in the front door.</i></p> |
| <p>11</p>  <p><i>Press the Feed/Pause button to advance the media and adjust the media feed. Tear off the media by pulling it downwards.</i></p> | |

Peel-Off (Self-strip)

The EasyCoder PM4i can print on labels, tickets, tags, and continuous stock in various forms. This section describes the case when self-adhesive labels are separated from the liner immediately after printing, which requires optional integral self-strip unit with liner takeup. This is also known as “Self-strip” operation.

Peel-off operation cannot be performed when an optional fan-fold guide fitted.

Peel-off can only be used for:

- Self-adhesive labels with liner

An optional label-taken sensor can hold the printing of the next label in a batch until the present label has been removed, see Chapter 8, “Options.”







Note: Save the label indicating the sensitivity number attached to the media roll. You will need this number to set the media sensitivity, see Appendix E.







Note: Peel-off operation sets high demands on the media in regard of label stiffness, release characteristics of the adhesive and liner, resistance against electrostatic charging etc., so the labels will be dispensed properly. Consult your media supplier or test the media to ascertain that it is suitable for your application.


Peel-Off, cont.
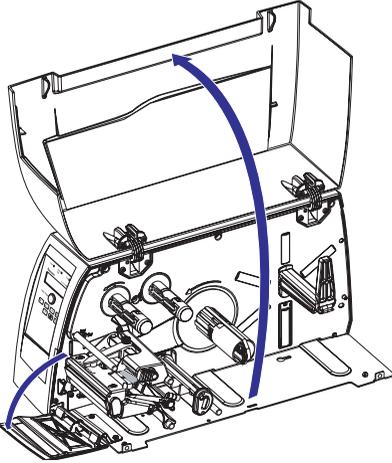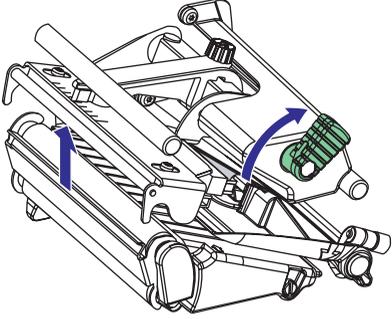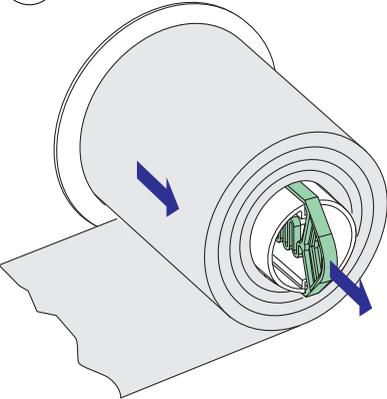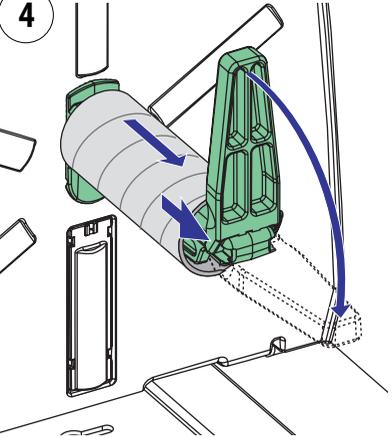
| | |
|---|---|
| <p>1</p>  <p>Open the front and side doors.</p> | <p>2</p>  <p>Turn the printhead lift lever clockwise to raise the printhead.</p> |
| <p>3</p>  <p>Pull out the handle to collapse the takeup hub, then remove any liner.</p> | <p>4</p>  <p>Pull out the edge guide as far as it goes and fold it down to a horizontal position. Remove any empty core from the media supply roll post.</p> |


Peel-Off, cont.
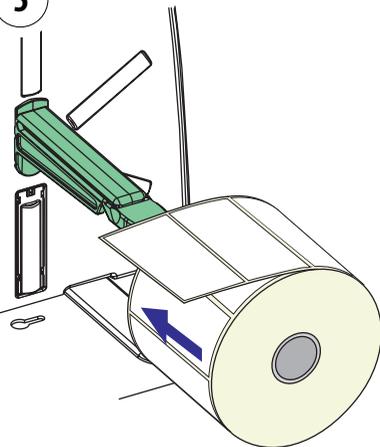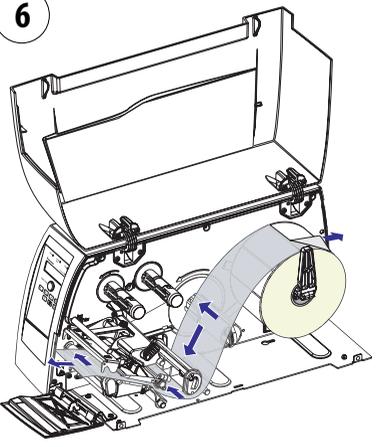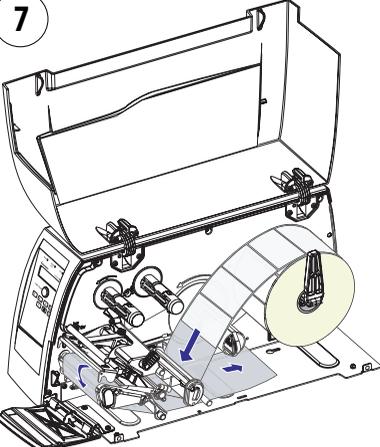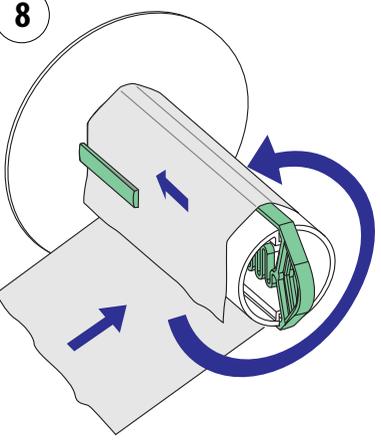
| | |
|--|--|
| <p>5</p>  <p><i>Fit a new roll of media on the supply post. Fold up and adjust the edge guide so the roll becomes flush with the center section.</i></p> | <p>6</p>  <p><i>Remove labels from the first 50 cm (20 inches) of the liner. Route the liner through the print mechanism and push it inwards towards the center section as far as it goes.</i></p> |
| <p>7</p>  <p><i>Route the liner around the tear bar and the liner drive roller and back under the print mechanism and guide shafts.</i></p> | <p>8</p>  <p><i>Insert the start of the liner under the lip of the takeup hub, then rotate the hub counterclockwise a few turns to wind up some of the liner.</i></p> |


Peel-Off, cont.

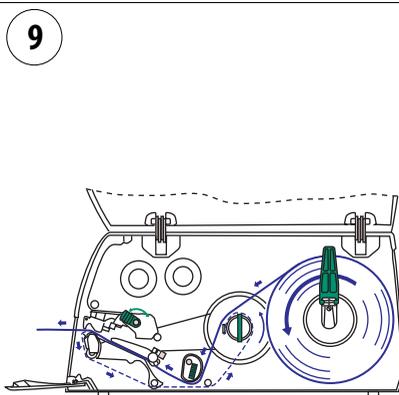


This diagram shows the media and liner paths.

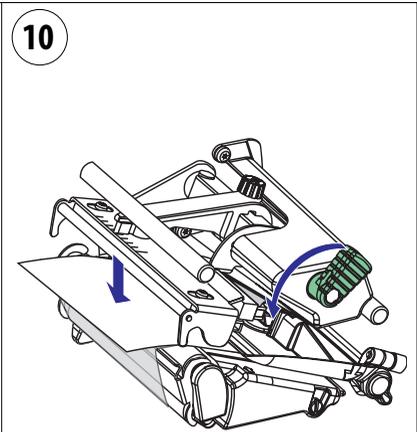

Turn the printhead lift lever counter-clockwise to engage the printhead.

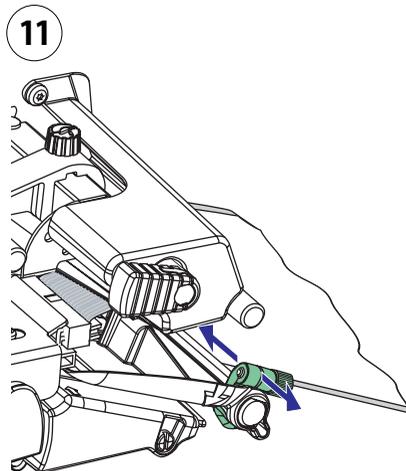


Adjust the position of the green edge guide so the media is guided with a minimum of play. Lock with the nut.

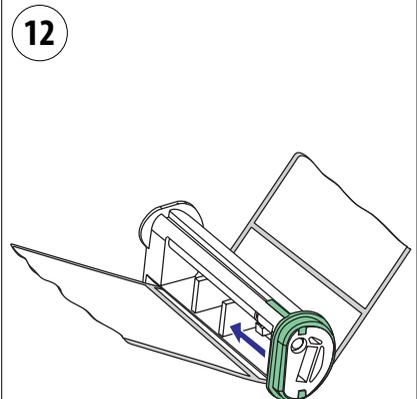

Adjust the position of the edge guide on the label slack absorber according to the width of the media.

Peel-Off, cont.

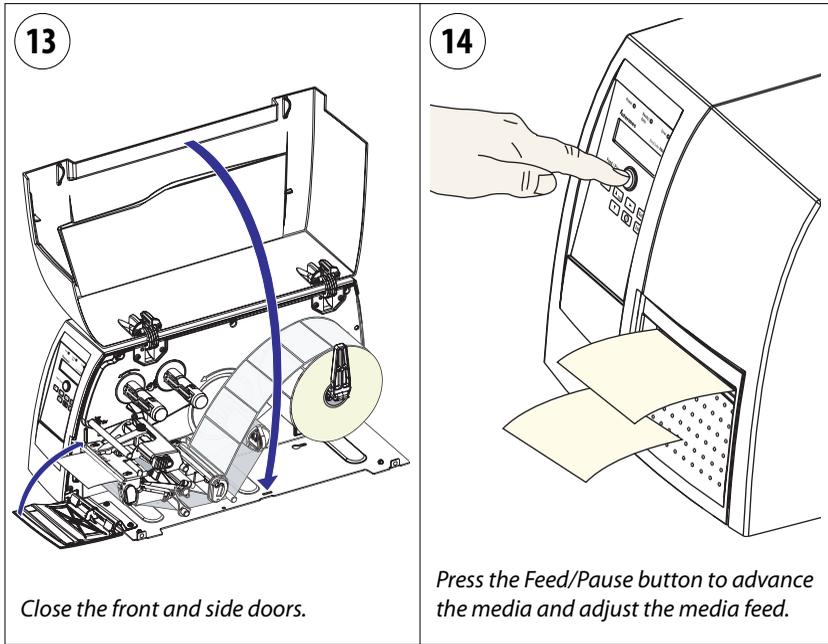

Cut-Off

The EasyCoder PM4i can print on labels, tickets, tags, and continuous stock in various forms. This section describes the case when the media is to be cut off by an automatic paper cutter (option).

Cut-off can be used for:

- Non-adhesive continuous stock
- Self-adhesive labels with liner (cut only liner between labels)

The cutter is designed to cut through paper-based media with a thickness between 60 and 175 μm , which roughly corresponds to a paper weight of 60 to 175 grams/ m^2 (basis weight 40 to 120 lb). The cutter should not be used to cut through labels, because the adhesive will stick to the shears, which can damage the cutter.

The cutter is held by a latch inside the media compartment and can be tilted forward to facilitate media load. A switch prevents the cutter from operating when in open position.

The optional label taken sensor cannot be used with the cutter.





There is no front door when a cutter is installed.

The cutter can be fitted with an optional tray for collecting cut-off labels.







Note: Save the label indicating the sensitivity number attached to the media roll. You will need this number to set the media sensitivity, see Appendix E.


Cut-Off, cont.
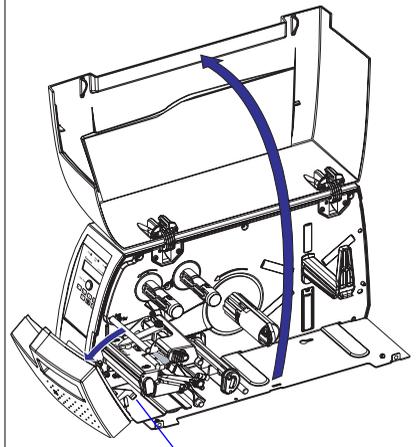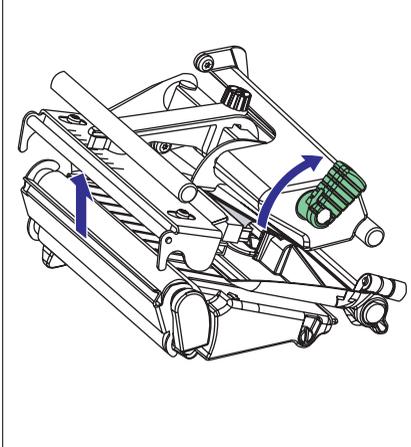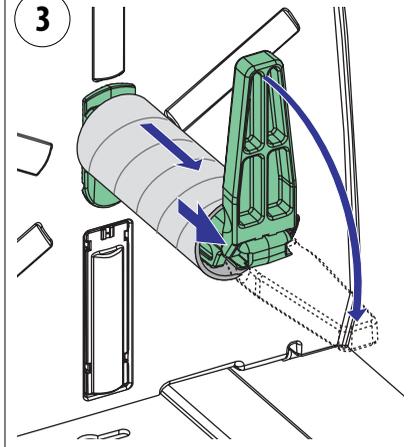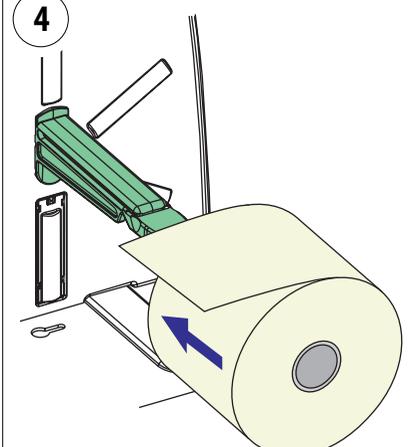
| | |
|---|---|
| <p>1</p>  <p>Latch</p> <p>Open the cutter and the side door.</p> | <p>2</p>  <p>Turn the printhead lift lever clockwise to raise the printhead.</p> |
| <p>3</p>  <p>Pull out the edge guide as far as it goes and fold it down to a horizontal position. Remove any empty core from the media supply roll post.</p> | <p>4</p>  <p>Fit a new roll of media on the supply post. Fold up and adjust the edge guide so the roll becomes flush with the center section.</p> |

Cut-Off, cont.
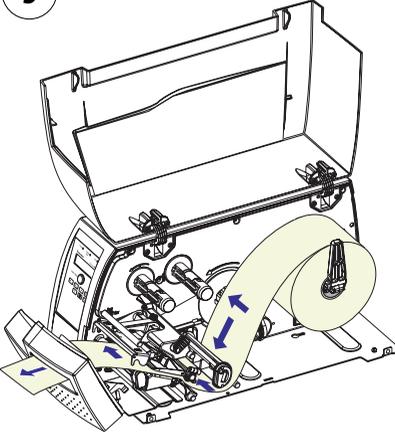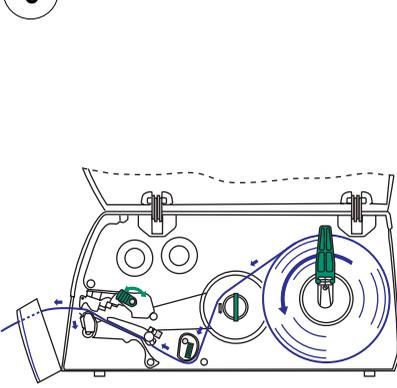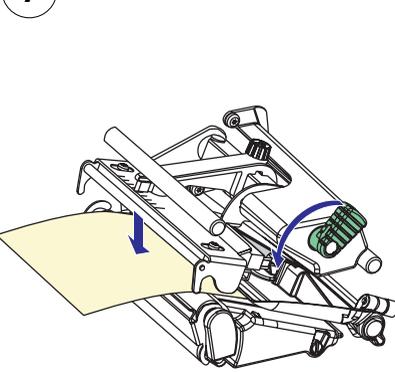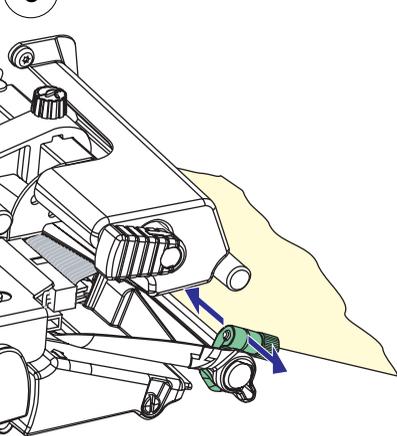
| | |
|---|---|
| <p style="text-align: center;">5</p>  <p><i>Route the media through the print mechanism and cutter. Then push it towards the center section as far as it will go.</i></p> | <p style="text-align: center;">6</p>  <p><i>This diagram shows the media path.</i></p> |
| <p style="text-align: center;">7</p>  <p><i>Turn the printhead lift lever counter-clockwise to engage the printhead.</i></p> | <p style="text-align: center;">8</p>  <p><i>Adjust the position of the green edge guide so the media is guided with a minimum of play. Lock with the nut.</i></p> |

Cut-Off, cont.

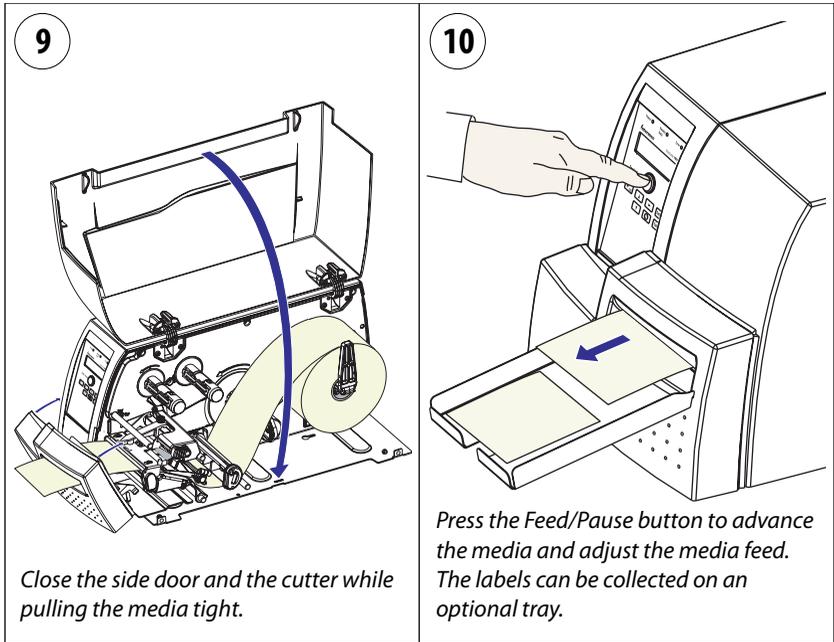


External Supply (Fan-fold)

The EasyCoder PM4i can print on labels, tickets, tags, and continuous stock in various forms. This section describes the case when the media supply is placed behind the printer, usually in the form of fan-folded tickets or tags. External supply can be used with tear-off (straight-through) and cut-off printing.

Although it is possible to simply feed the media through the hole in the rear part of the side door and directly to the print mechanism, we strongly recommend using a printer fitted with a special fan-fold guide as illustrated below. Not only does it make media loading much easier, but it also guides the media with great accuracy. The fan-fold guide can be adjusted for various media widths down to 40 mm (1.57 inches).

When using an external media supply, take care to protect the media from dust, dirt or other foreign particles, that can impair the printout quality or cause unnecessary wear to the printhead.

Depending on brand and quality, all direct thermal media are more or less sensitive to heat, direct sunlight, moisture, oil, plasticizers, fat, and other substances. Protect the media accordingly.

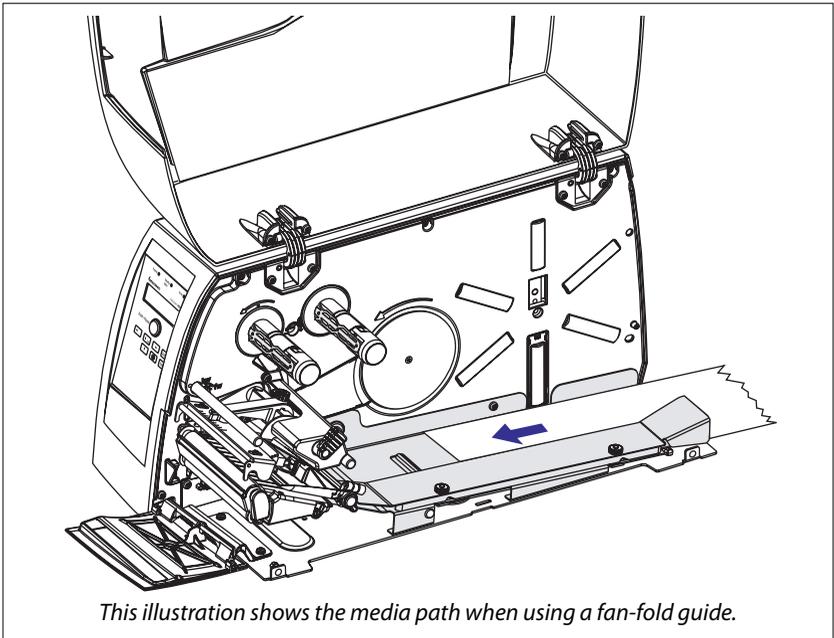



5 Thermal Transfer Printing

This chapter explains how to load the printer with ribbon for thermal transfer printing.

Ribbon Load

The EasyCoder PM4i can print on labels, tickets, tags, and continuous stock using either direct thermal printing on special heat-sensitive media or thermal transfer printing using a special ink-coated ribbon.

Thermal transfer printing makes it possible to use a wide range of receiving face materials and gives a durable printout less vulnerable to fat, chemicals, heat, sunlight etc. than direct thermal printing. Make sure to select a type of ribbon that matches the type of receiving face material and to set up the printer accordingly.

The EasyCoder PM4i can use transfer ribbon rolls wound with the ink-coated side facing either outward or inward. Illustrations in this manual show the ink-coated side facing inward.





Even if ribbon usually is loaded in connection with media replenishment, no loaded media are shown in the illustrations in this chapter in order to give a clearer view of the ribbon path. Refer to Chapter 4 for media load instructions.

Most transfer ribbons do not smear at room temperature.




Note: Save the label indicating the sensitivity number attached to the ribbon roll. You will need this number to set the media sensitivity, see Appendix E.


Ribbon Load, cont.
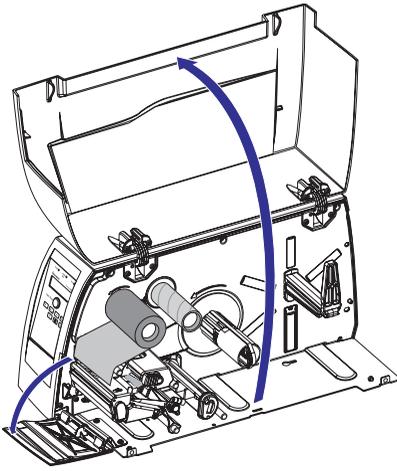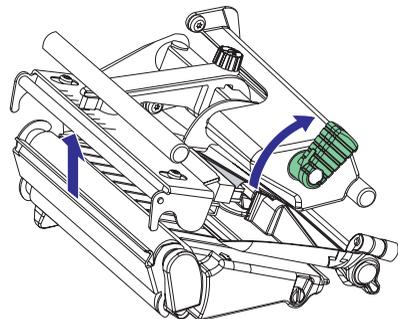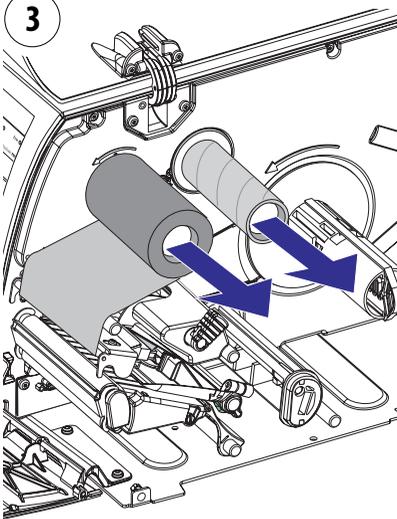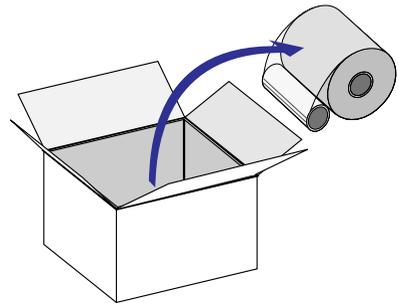
| | |
|--|--|
| <p>1</p>  <p>Open the front and side doors.</p> | <p>2</p>  <p>Turn the printhead lift lever clockwise to raise the printhead.</p> |
| <p>3</p>  <p>In case of ribbon reload, remove any used ribbon and empty ribbon core.</p> | <p>4</p>  <p>Unpack a roll of original Intermec thermal transfer ribbon.</p> |


Ribbon Load, cont.

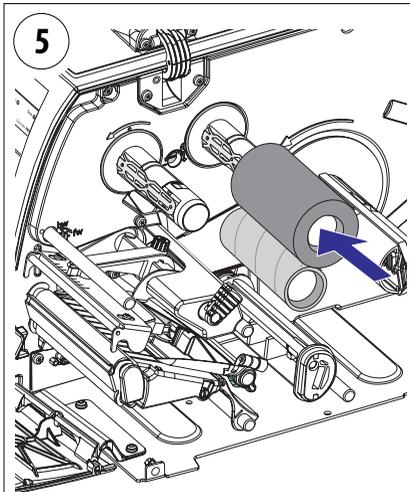


Slide the ribbon roll onto the supply hub so the ink-coated side faces down when the ribbon is routed through the print mechanism.

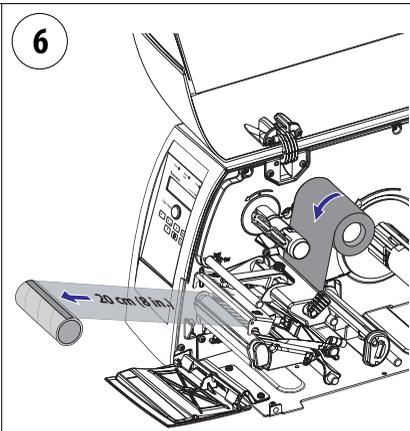

Route the ribbon through the print mechanism underneath the transparent upper LSS guide and pull out approximately 20 cm (8 inches) of ribbon leader.

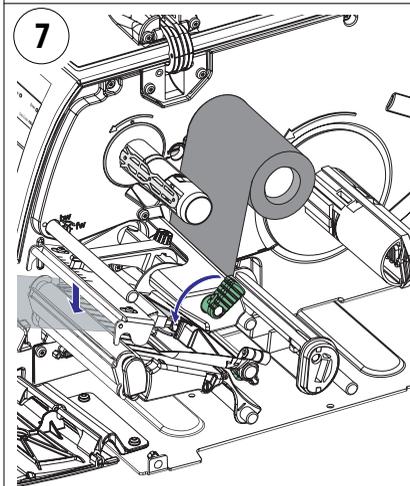


Without releasing the ribbon, turn the printhead lift lever counterclockwise to engage the printhead and lock the ribbon.

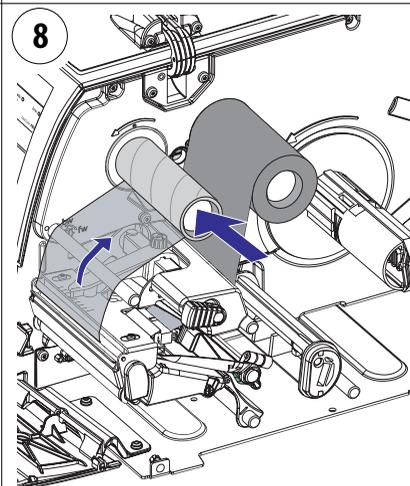


Slide the empty cardboard core onto the ribbon rewind hub so the ribbon is wound up when the hub rotates counterclockwise.


Ribbon Load, cont.

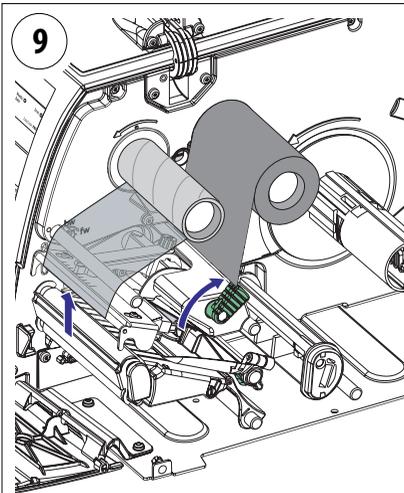


Turn the printhead lift lever clockwise to raise the printhead and release the ribbon.

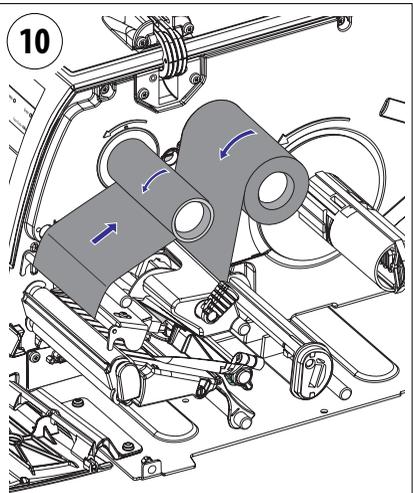

Manually advance the ribbon until all of the transparent leader has passed the printhead and the ribbon becomes tight.

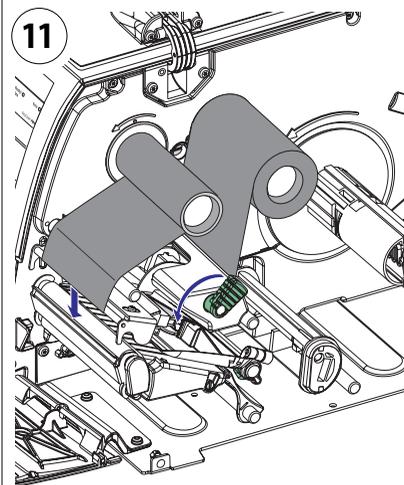

Turn the printhead lift knob counter-clockwise to engage the printhead.

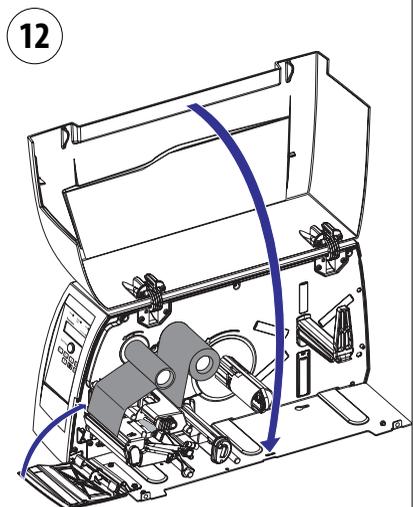

Close the front and side doors.



6 Setting Up the Printer

This chapter describes the various parameters that are used in the Setup Mode (see Chapter 7) or in the various application programs to configure the printer for the user's specific requirements. It covers the following topics:

- Description
- Default setup
- Setup Parameters in regard of communication, test/service, media, and configuration.

Description

The setup controls the printer in regard of serial communication, test and service operations, and specifies which types of media and ribbon are loaded in the printer.

Check the list below to see if the printer's default setup matches your requirements. If not, you will have to change the setup. To enter the Setup Mode, press the <**Setup**> key on the printer's built-in keyboard and follow the instructions in Chapter 7, "Setup Mode."

Default Setup

The printer's default setup is listed below (no options included):

| | |
|----------------------|----------------|
| Ser-Com | |
| Baud rate | 9600 bps |
| Data bits | 8 bits |
| Parity | None |
| Stop bits | 1 bit |
| Protocol | XON/XOFF |
| Test/Service | |
| Testprint | not applicable |
| Data dump | No |
| Memory reset | not applicable |
| Media | |
| Media type | Gap |
| Paper type | DT |
| Label length | 1200 dots |
| Sensitivity | 420 |
| Darkness | 0% |
| Label rest point | 0 |
| Form adj dots X | 0 |
| Form adj dots Y | 0 |
| Configuration | |
| Emulation | None |
| Print speed | 4 in/sec |
| Cutter | Not installed |
| Label taken sensor | Not installed |

Setup Parameters

Serial Communication

The serial communication parameters control the communication between the printer and the connected computer or other devices on the serial port.



Note: The serial communication parameters have no effect on parallel or EasyLAN communications.

Make sure the printer's communication parameters match the setup of the connected device or vice versa. If the setup of the printer and the setup of the host do not match, the response from the printer to host will be garbled.

Baud Rate

The baud rate is the transmission speed in bits per second. There are 8 options:

- 1200
- 2400
- 4800
- 9600 (default)
- 19200
- 38400
- 57600
- 115200

Character Length

The character length specifies the number of bits that will define a character.

- 7 Characters ASCII 000 to 127 decimal
- 8 Characters ASCII 000 to 255 decimal (default)

Parity

The parity decides how the firmware will check for transmission errors. There are four options:

- None (default)
- Even
- Odd
- Space

Stop Bits

The number of stop bits specifies how many bits will define the end of a character. There are two options:

- 1 (default)
- 2

Protocol

XON/XOFF (default)

In the XON/XOFF protocol, data flow control is achieved by using XON (DC1) and XOFF (DC3) characters. Message blocks are **not** required to be bracketed by the Start of Text (STX) and End of Text (ETX) characters. However, at power up or after a reset all characters except ENQ or VT will be ignored until an STX is detected. The message length in this protocol is unrestricted. That is, the printer processes information as it is being downloaded and stops when there is no more information.

XON/XOFF protocol conforms to generally accepted industry standards. No end-of-message response is sent to the host other than XOFF. An XON will be sent on power up.

Since DC1 and DC3 are used for data flow control, the printer status characters are different than those of the Standard Protocol. If the host ignores the printer's XOFF, the printer will resend an XOFF after receiving every 15 characters from the host.

| <i>Condition</i> | <i>Character</i> |
|---------------------|------------------|
| Buffer already full | GS |
| Printhead raised | US |
| Ribbon fault | US |
| No label stock | EM |
| Buffer now full | DC4 |
| Printhead hot | SI |
| Label at strip pin | FS |
| Label skipping | DC2 |
| Printing | DC2 |

Intermec Standard Protocol

The Intermec Printer Standard Protocol is a half-duplex protocol. All data transmissions to the printer consist of status inquiry (ENQ), status dump (VT), or message blocks. Each message block starts with the Start of Text (STX) character and ends with the End of Text (ETX) character. Each message block must be 255 characters or less, including the STX and ETX characters. The printer responds to each status inquiry or message block with the printer status. The host should check the printer status before downloading a message block to the printer. ENQ causes the printer to transmit its highest priority status, while VT instructs the printer to transmit all status that applies in the order of their priority. The possible printer status in descending priorities are

| <i>Condition</i> | <i>Character</i> |
|---------------------|------------------|
| Buffer already full | GS |
| Printhead raised | US |
| Ribbon fault | US |
| No label stock | EM |
| Buffer now full | DC3 |
| Printhead hot | SI |
| Label at strip pin | FS |
| Label skipping | DC1 |
| Ready | DC1 |
| Printing | DC1 |

Test/Service

Testprint

This part of the Setup Mode allows you to print various types of test labels. Go to the desired option and press <Enter>. The printer will start printing the test label or labels. Press the <Feed/Pause> button to hold the printing temporarily. To resume printing, press the <Feed/Pause> button again. The following options are available:

Configuration

Select between software (SW), hardware (HW), and network.

The Software Configuration Label contains:

- Current configuration parameters stored in the printer's memory
- Defined pages
- Defined formats
- Defined graphics
- Defined fonts
- Any installed printer options

The Hardware Configuration Label contains:

- Printer memory information
- Printer mileage
- Printhead settings
- Firmware checksum, program, and version number

The Network Configuration Label contains:

- WINS Name
- MAC Address
- IP Selection
- IP Address
- Netmask
- Default Router
- Name Server
- Mail Server
- Primary WINS Server
- Secondary WINS Server
- Network Statistics

Format

The Format Label contains a single format that you can use to evaluate the print quality of a particular format. This option prints labels for all the formats stored in the printer's memory.

Page

The Page Label tests the ability of the printer to receive and print single or multiple pages of label data that is sent from the host. This option prints labels for all the pages stored in the printer's memory.

UDC

The UDC Label tests the ability of the printer to receive and print single or multiple user-defined characters (bitmap graphics) that are sent from the host. This option prints labels for all the UDCs stored in the printer's memory.

Font

The Font Label contains all the characters in a single font. This option prints labels for all the user-defined fonts (UDF) stored in the printer's memory.

Data Dump

If data dump is enabled by selecting the "Yes" option, the printer prints all data and protocol characters received on the serial port. An ASCII and hexadecimal representation of each character is printed.

Memory Reset

There are two options. The memory will be reset to factory default as soon as an option has been selected and <Enter> is pressed. Select between "All", which resets the entire memory and "Configuration" which just resets the configuration part of the memory.

Media

The media parameters tell the firmware the characteristics of the media that will be used, so the printout will be positioned correctly and get the best quality possible.

Media Type

The Media Type parameters control how the label stop sensor (LSS) and the media feed work. There are three media type options:

- Gap is used for adhesive labels mounted on liner (backing paper) or continuous paper stock with detection slots. Default.
- Mark is used for labels, tickets, or strip provided with black marks at the back.
- Continuous is used for continuous stock without any detection slots or black marks.

Paper Type

The Paper Type parameters control how the transfer ribbon mechanism and the ribbon sensor work. There are two paper type options:

- DT (Direct Thermal) is used for heat-sensitive media without any need for a thermal transfer ribbon. Default.
- TTR (Thermal Transfer) is used for non heat-sensitive receiving face materials in combination with a thermal transfer ribbon.

Label Length

The Label Length setup specifies the length in dots of each copy along the media feed direction (X-coordinate). This is used for “label-out” detection.

Sensitivity (Media Sensitivity Number)

This setup parameter specifies the characteristics of the direct thermal media or combination of receiving face material and thermal transfer ribbon, so the printer’s firmware can optimize the heating of the print-head and the print speed. Standard supplies from Intermec are labeled with a 3-digit media sensitivity number (see Appendix E) which is used to specify the media grade. The media sensitivity number can also be changed using PrintSet, third-party software, or an IPL command (<SI>gn [, m]). Default is 420 for direct thermal printing and 567 for thermal transfer printing.

Darkness

Use this parameter to make minor adjustments of the blackness in the printout, for example to adapt the printer to variations in quality between different batches of the same media quality. The value can be set within the range -10% to +10% where -10 is the lightest and 10 is the darkest. Default value is 0%.

Label Rest Point

Specifies where labels stop for removal. Use this for peel-off (self-strip) applications. Allowed range is -30 (furthest back) to 30 (furthest forward). Default is 0. Also available as an IPL command (`<SI>fn`).

Form Adj Dots X

Specifies where the X-position of the origin should be placed on the label. Allowed range is -30 (closest to the leading edge) to 30 (furthest from the leading edge). Default is 0.

Form Adj Dots Y

Specifies where the Y-position of the origin should be placed on the label. Allowed range is -30 (closest to the center section) to 30 (furthest from the center section). Default is 0.

Configuration

Emulation

Emulation mode lets you print bar code labels that were originally designed on an 86XX printer in multiples of 10 or 15 mil. When the printer is working in emulation mode, not all IPL commands are supported. For a complete list of commands available during emulation mode, see the the latest version of the *IPL Programming, Reference Manual* (P/N 066396-XXX).

To return from emulation mode, select emulation “none” (default).

Print Speed

You can select the print speed from 4 in./sec. (100 mm/sec.) to 8 in./sec. (200 mm/sec.) with an interval of 1 in./sec. The higher the print speed, the more wear on the printhead, so do not use a higher print speed than necessary. Some direct thermal media or ribbon/media combinations may not allow the highest alternatives without the printout quality being adversely affected.

Cutter (option)

If no cutter is installed, “Not Installed” is displayed as a read-only message. If a cutter is installed, you can select between “Enable”, and “Disable”.

Label Taken Sensor (option)

To make the printer work in self-strip mode, that is, waiting for a label to be removed before the next label is printed, the self-strip mode must be enabled. This can also be done by executing the following commands:

```
<STX>R<ETX>                               enter print/configuration mode
<STX><SI>tn<ETX>                             n=1 enables self-strip,
                                                n=0 disables self-strip.
```

If the label taken sensor does not work properly, the sensitiviy can be calibrated in the Setup Mode. Select “LTS Calibration” and follow the instructions in the display. Make sure that no direct sunlight or interior lighting interferes with the the label taken sensor.



7 Setup Mode

This chapter describes how to navigate in the setup mode, and provides overviews of the Setup Mode.


Navigating in Setup Mode

Enter the Setup Mode by pressing the <Setup> key on the printer's front panel. While going through the setup procedure, you are guided by texts in the printer's display. You can navigate between setup menus, acknowledge displayed values, select or enter new values, etc. by using the keys on the printer's keyboard.

| | |
|---|--|
|  | Move one step back on the same level. |
|  | Move up one level and escape without changing the setting. |
|  | Move forward on the same level. |
|  | Move down one level. |
|  | Acknowledge and move to next menu. |
|  | Exit the Setup Mode. Can be used anywhere in Setup Mode. |


The Setup Mode is organized as an endless loop, from which you can select a number of sub-categories. At startup, the firmware determines if options such as a label taken sensor, a cutter, or an interface board is installed in the printer. Only installed options are shown in the Setup Mode.

The diagram below shows the options in the main loop. Detailed overviews are shown on the pages that follow.

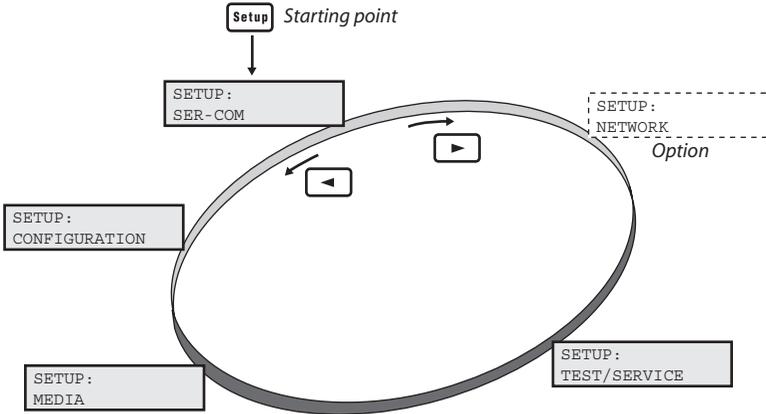

Setup Mode; Serial Communication

(IPL v2.10)

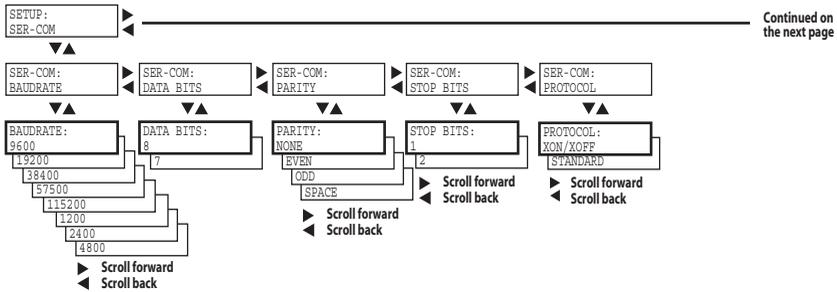

Legend:


Dotted boxes and lines indicate options.

Thick boxes indicates default options.

Values inside brackets indicate default settings.


Setup Mode; Network (option)

(IPL v2.10)

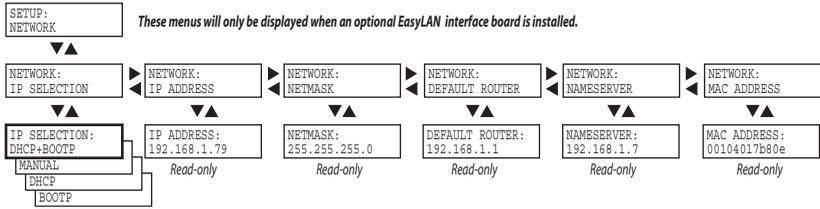


Setup Mode; Test/Service

(IPL v2.10)

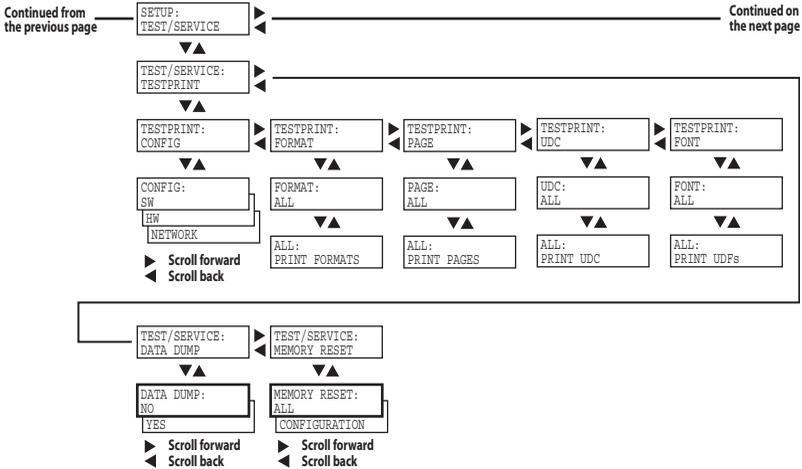


Setup Mode; Media


(IPL v2.10)

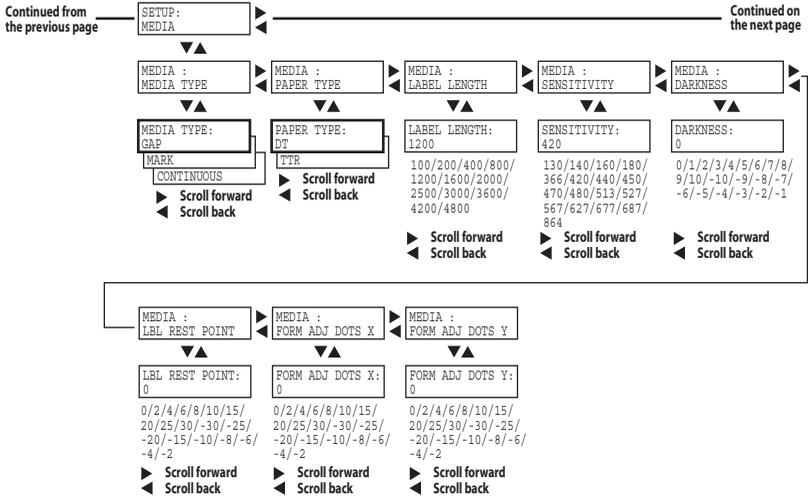

Setup Mode; Configuration

(IPL v2.10)

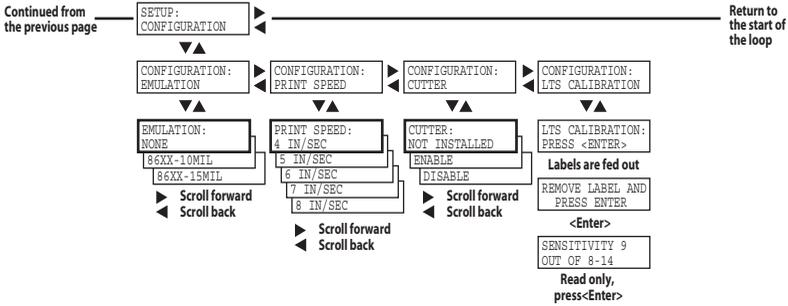

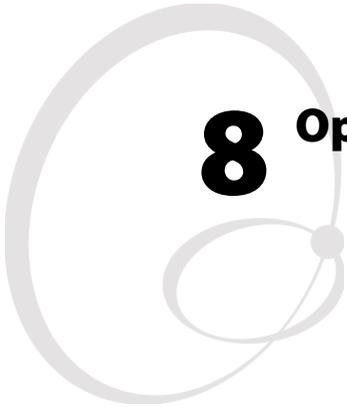


8 Options

This chapter describes the options available for the EasyCoder PM4i printer. The options can be factory installed, field-installed by an authorized service technician, or in some cases installed by the operator.

Introduction

The EasyCoder PM4i provides a high degree of flexibility because it has a modular design. By adding options to the basic printer, the EasyCoder PM4i can be adapted for a variety of applications. Most options should be installed by an authorized service technician or are only available as factory-installed options.

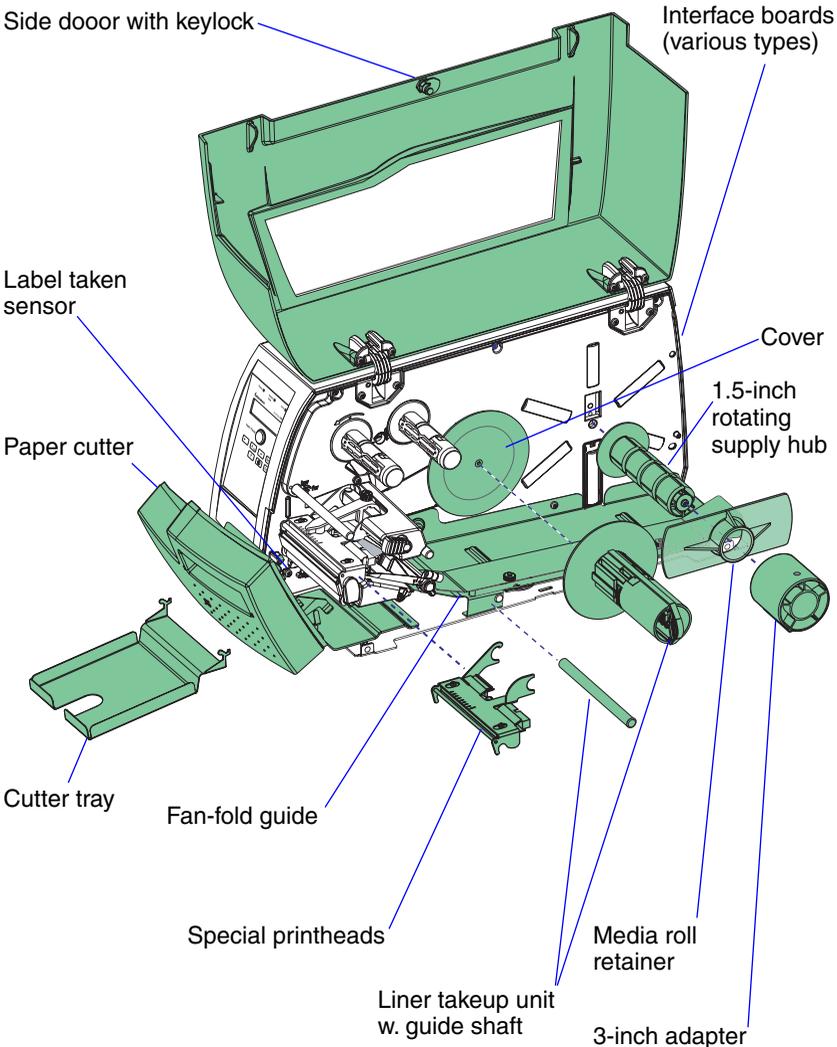

Integral Liner Takeup Unit

The integral liner takeup unit is an optional device for peel-off (self-strip) operation, which means that the labels are separated from a liner (backing paper) after printing and the liner is wound up on an internal hub. The unit also includes a guide shaft. Peel-off cannot be combined with an internal fan-fold guide. Also see Chapter 4, "Media Load, Peel-Off."

Paper Cutter

The paper cutter is designed to cut off continuous paper-based stock or liner between labels. The cut-off labels, tickets, or tags can be collected on an optional tray. Also see Chapter 4, "Media Load, Cut-Off."

Media Supply Hub

The rotating media supply hub is designed to fit media roll cores with an internal diameter of 38-40 mm (1.5 inch).

Media Roll Retainer

The retainer is intended to keep large media rolls in place when using a rotating media supply hub. It restricts the maximum media width to 100 mm (3.9 inches). Installed by the operator.

3-inch Adapter

The 3-inch/76 mm adapter is used with a rotating media supply hub and makes it possible to use media rolls with 3 inch/76 mm inner diameter cores. The adapter is pressed onto the hub and secured by a screw. Not used with a media supply roll post. Installed by the operator.

Label Taken Sensor

The Label Taken Sensor (LTS) is a photoelectric sensor that enables the printer's firmware to detect if the latest printed label, ticket, tag, etc. has been removed before printing another copy. The LTS cannot be used in connection with a paper cutter.

Internal Fan-Fold Guide

This guide facilitates media load from an external supply to the rear of the printer and provides superior guiding of the media. It can not be used in connection with peel-off (self-strip) operation and cannot be combined with a label slack absorber, which may restrict the maximum print speed somewhat.

Side Door with Keylock

If the media is valuable or sensitive, such as tickets, you can install a side door that can be locked with a key. Can be installed by the operator.

Thick Media Printhead

As standard, the printer is fitted with an 8 dots/mm (203.2 dots/inch) thermal printhead for a media thickness of max. 175µm (7 mils). There is also an optional printhead for 170-220 µm (6.6-8.7 mils) media thickness. The printhead can easily be replaced by the operator as described in Chapter 11.

Interface Boards

A number of interface boards are available for use with the EasyCoder PM4i printer. The interface boards are either factory-fitted or can easily be fitted by an authorized service technician.

The EasyCoder PM4i can accommodate one EasyLAN interface board plus one IEEE 1284 Parallel Interface Board.

EasyLAN boards:

- EasyLAN Ethernet Interface
- EasyLAN Wireless Interface




9 Troubleshooting

This chapter lists various possible cases of inferior printout quality, describes possible causes, and suggests remedies.

Chapter 9—Troubleshooting

| Symptom | Possible Cause | Remedy | Refer to |
|-----------------------------|------------------------------|---------------------------------------|-----------------------|
| Overall weak print-out | Wrong media grade | Change parameter | Chapter 6, Appendix E |
| | Contrast value too low | Change parameter | Chapter 6 |
| | Printhead pressure too low | Adjust | Chapter 11 |
| | Worn printhead | Replace printhead | Chapter 10 |
| | Wrong printhead voltage | Replace CPU board | ☛ Call Service |
| Printout weaker on one side | Uneven printhead pressure | Adjust arm alignment | Chapter 11 |
| Weak spots | Foreign particles on media | Clean or replace | Chapters 4 & 5 |
| | Media/ribbon don't match | Change to matching media | Chapter 6 |
| | Poor media or ribbon quality | Select a better brand of media/ribbon | Appendix E |
| | Worn printhead | Replace printhead | Chapter 10 |
| | Worn platen roller | Check/replace | ☛ Call Service |
| Overall dark print-out | Wrong media grade | Change parameter | Chapter 6, Appendix E |
| | Contrast value too high | Change parameter | Chapter 6 |
| | Printhead pressure too high | Adjust | Chapter 11 |
| | Wrong printhead voltage | Replace CPU board | ☛ Call Service |
| Excessive bleeding | Wrong media grade | Change parameter | Chapter 6, Appendix E |
| | Contrast value too high | Change parameter | Chapter 6 |
| | Printhead pressure too high | Adjust | Chapter 11 |
| | Faulty energy control | Replace CPU board | ☛ Call Service |
| Dark lines along media path | Foreign objects on printhead | Clean printhead | Chapter 10 |

| | | | |
|-----------------------------------|---|--|-----------------------|
| White vertical lines | Printhead dirty | Clean printhead | Chapter 10 |
| | Missing printhead dots | Replace printhead | Chapter 10 |
| Large part of dot line missing | Failing printhead | Replace printhead | Chapter 11 |
| | Failing strobe signal | Check CPU-board | ☛ Call Service |
| Printout missing along inner edge | Bad media alignment | Adjust | Chapter 4 |
| | Small core & supply post in upper pos. | Move post to lower pos. | Chapter 2 |
| | X-start parameter value too low | Increase | Chapter 6 |
| Transfer ribbon breaks | Ribbon not fitted correctly | Reload ribbon | Chapter 5 |
| | Wrong media grade | Change parameter, then clean printhead | Chapter 6, Chapter 10 |
| | Bad energy control | Adjust | ☛ Call Service |
| Transfer ribbon wrinkles | Faulty ribbon break shaft adjustment | Adjust | Chapter 11 |
| | Incorrect edge guide adjustment | Adjust | Chapter 4 |
| | Too strong print-head pressure | Adjust | Chapter 11 |
| No thermal transfer printout | Ink-coated side does not face media | Reload ribbon | Chapter 5 |
| Media feed not working properly | Changed media characteristics | Press the Print button | Chapter 4 |
| | Wrong label rest dots parameter | Check/change | Chapter 6 |
| | Wrong Media Type parameter | Check/change | Chapter 6 |
| | Wrong LSS position | Check/change | Chapter 11 |
| | Dirty sensors | Clean media guides | Chapter 10 |
| | Faulty sensors | Replace | ☛ Call Service |
| Compressed text or bar code | Too high print speed for large media roll | Lower print speed | Chapter 6 |

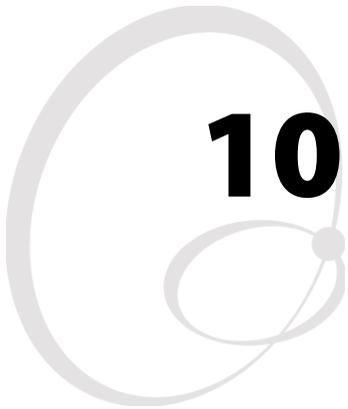

10 Maintenance

This chapter describes how the operator can maintain the printer. Regular maintenance is important for the printout quality and for the life of the printhead. The chapter covers the following topics:

- Printhead cleaning
- External cleaning
- Cleaning the media guides
- Printhead replacement
- Media jams


Printhead Cleaning

Cleaning the printhead on a regular basis is important for the life of the printhead and for the printout quality. You should clean the printhead each time you replace the media. This section describes how to clean the printhead using cleaning cards. If additional cleaning is required, for example removing adhesive residue from the platen roller or tear bar, use a cotton swab moistened with isopropyl alcohol.







Warning

Isopropyl alcohol [(CH₃)₂CHOH; CAS 67-63-0] is a highly flammable, moderately toxic, and mildly irritating substance.

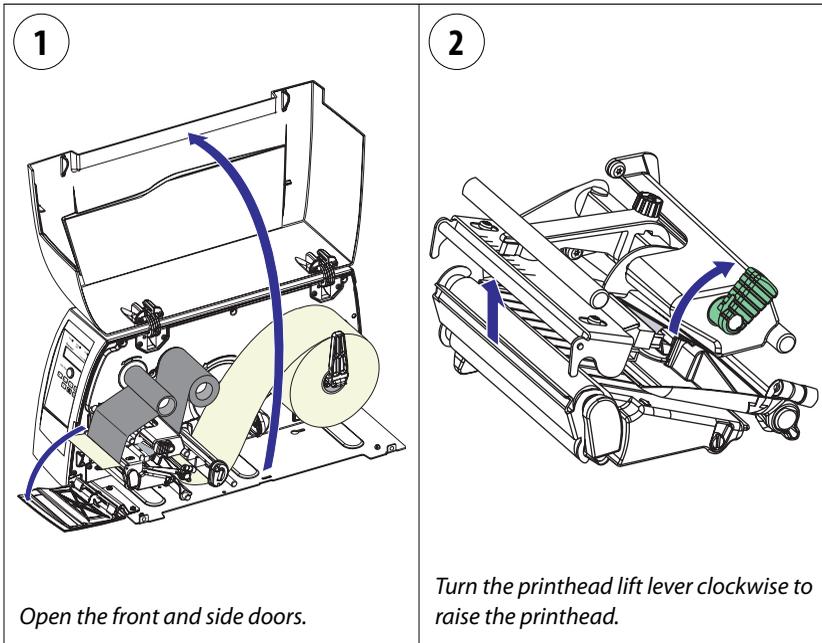


Printhead Cleaning, cont.

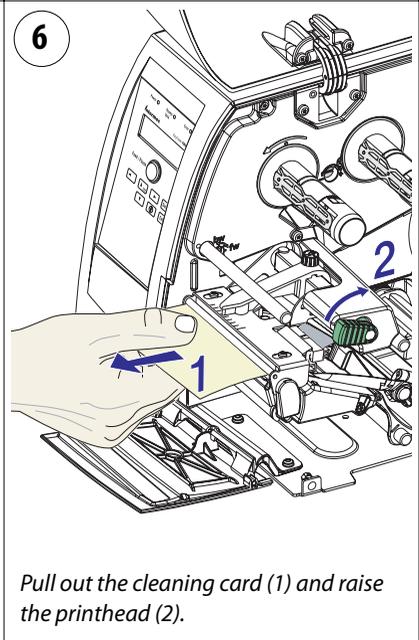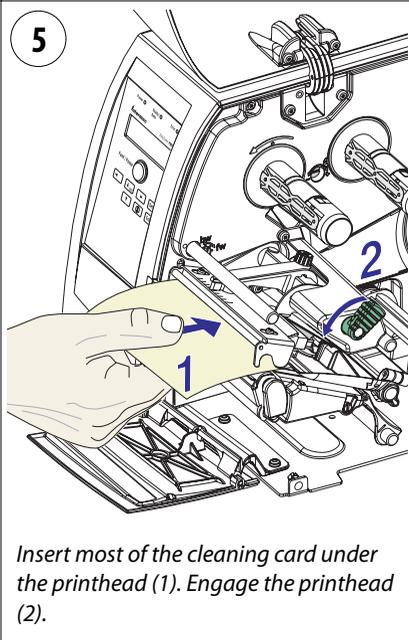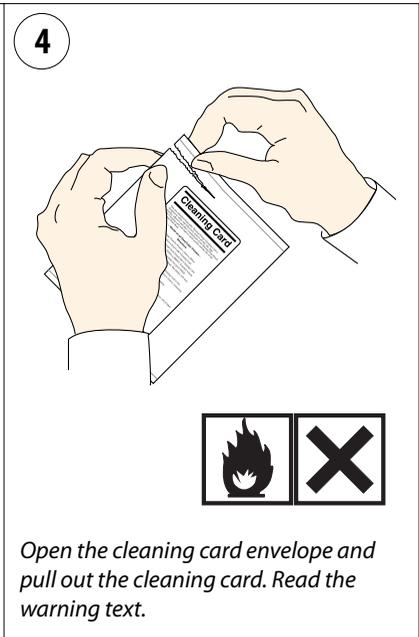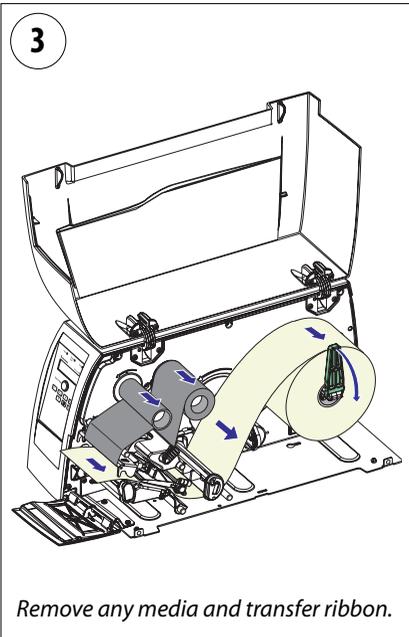


Printhead Cleaning, cont.

7

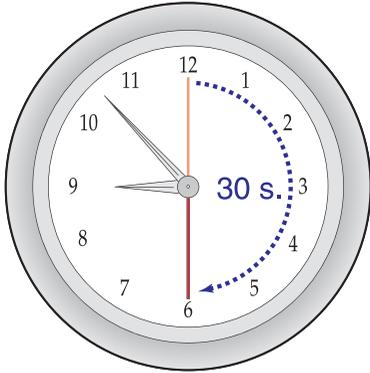


Wait for approx. 30 seconds to allow the cleaning fluid to dissolve the residue.

8

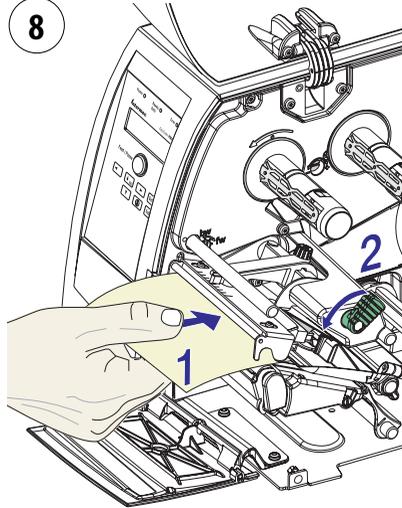


Insert most of the cleaning card under the printhead again (1). Engage the printhead (2).

9

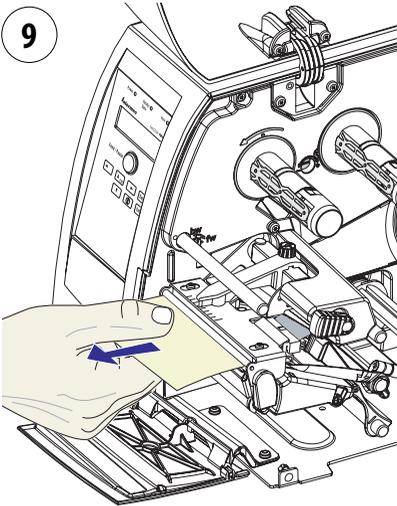





Pull out the cleaning card. If necessary, repeat the process with a fresh cleaning card.

10

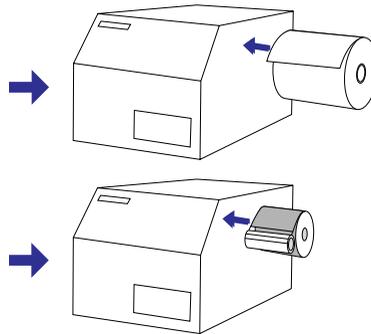

Allow the cleaned parts to dry before loading any media (and ribbon).

External Cleaning
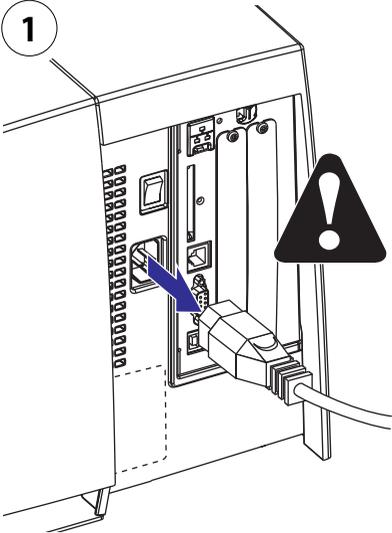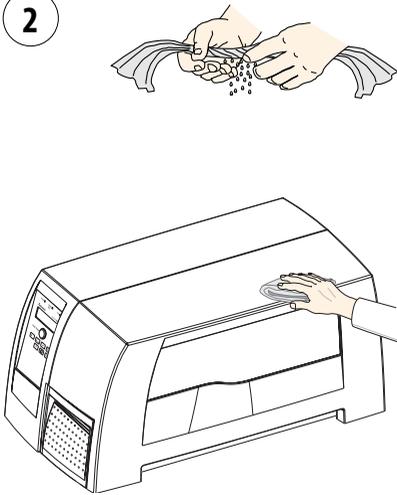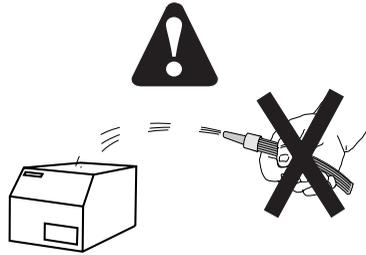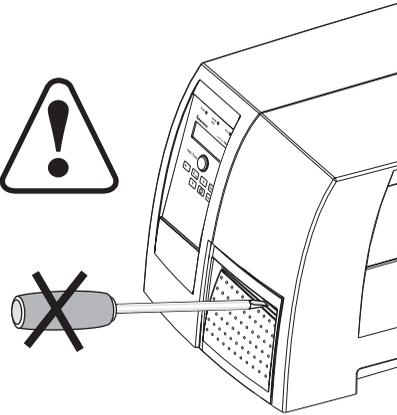
| | |
|--|---|
| <p>1</p>  <p><i>Always remove the power cord before cleaning!</i></p> | <p>2</p>  <p><i>Wipe external surfaces with a soft cloth slightly moistened with water or a mild detergent.</i></p> |
| <p>3</p>  <p><i>Never spray the printer. Protect it from water when cleaning the premises.</i></p> | <p>4</p>  <p><i>Never use any sharp tools for removing stuck labels. The printhead and rollers are delicate.</i></p> |

Cleaning the Media Guides


Both parts of the label stop sensor, which controls the media feed, are covered by plastic guides. The guides are transparent to allow the light to pass between the two parts of the label stop sensor. These areas must be kept clean from dust, stuck labels, and adhesive residue.

If the printer starts to feed our labels in an unexpected way, pull out the upper guide as described below and check for any object that may block the beam of light (dust, stuck labels, adhesive residue, etc.). If necessary, clean the guides using a cleaning card or a soft cloth soaked with isopropyl alcohol. Do not use any other type of chemical. Be careful not to scratch the guides.



Warning

Isopropyl alcohol [(CH₃)₂CHOH; CAS 67-63-0] is a highly flammable, moderately toxic, and mildly irritating substance.

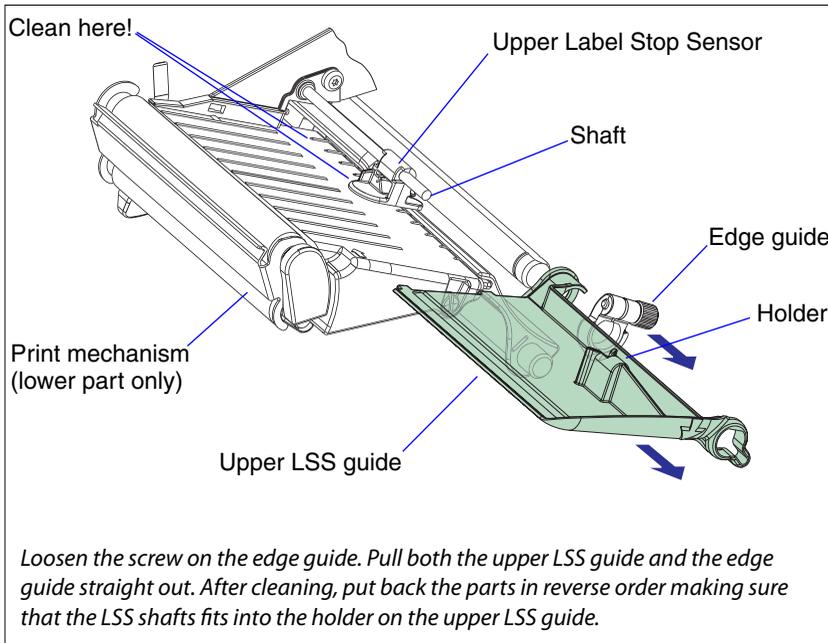


Printhead Replacement

The printhead is subject to wear both from the direct thermal media or ribbon and from the rapid heating and cooling process during printing. Thus, the printhead will require periodic replacement.

Time between printhead replacements depends on the print images, the type of direct thermal media or ribbon in use, the amount of energy to the printhead, the print speed, the ambient temperature, and several other factors.




While replacing the printhead, the power must be off. The firmware will not detect the new printhead resistance until the printer has been restarted.

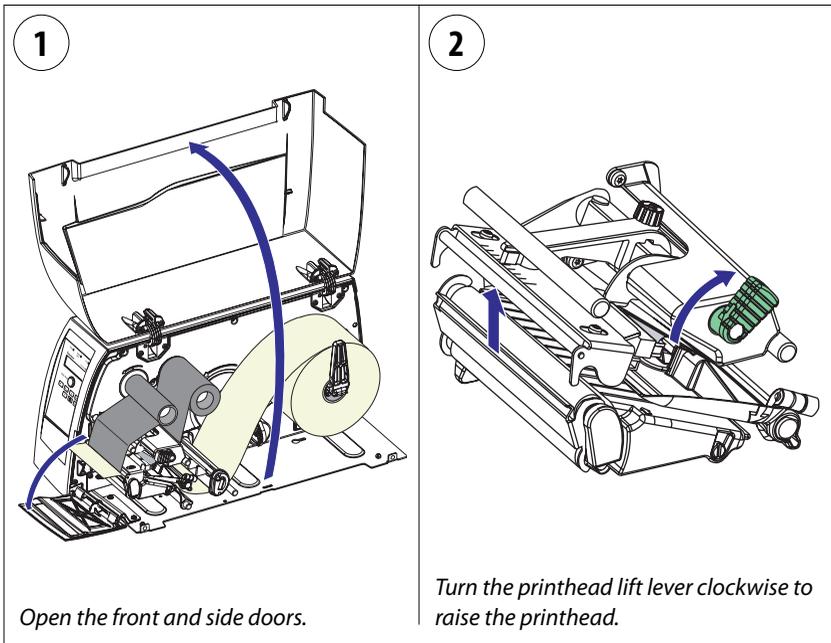


Printhead Replacement, cont.

3

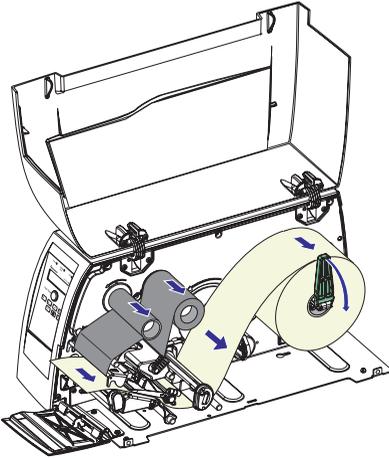


Remove any media and transfer ribbon.

4

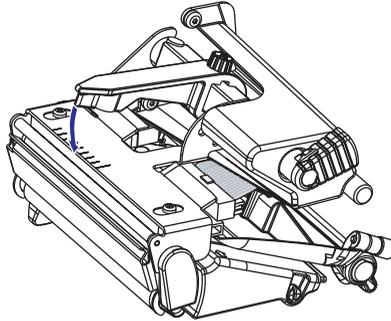


Pull the printhead bracket away from the magnet in the pressure arm.

5

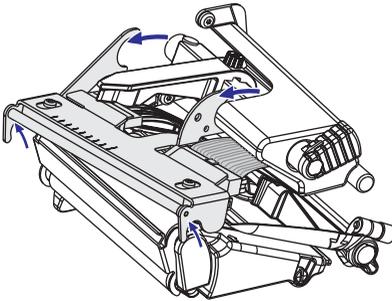

Disconnect the printhead bracket from the print mechanism as indicated by the arrows and pull out the printhead as far as the cables allow.


6

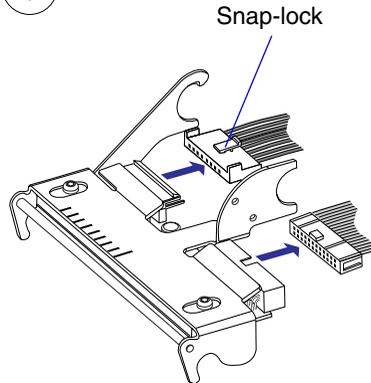

Disconnect the cables from the printhead. Note the snap-lock on the inner connector. Pull at the connectors—not at the cables!


Printhead Replacement, cont.

7

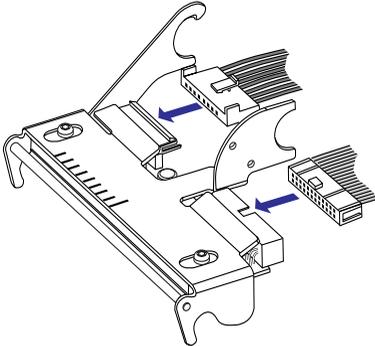


Connect the two cables to the replacement printhead.

8

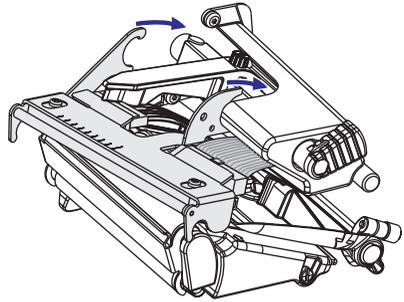


Put back the printhead in reverse order and check that the printhead cables run freely.

9

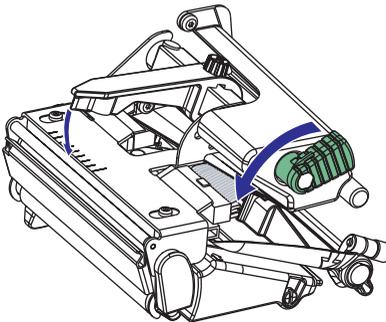

Turn the printhead lift lever counter-clockwise so the magnet engages the printhead bracket.

10

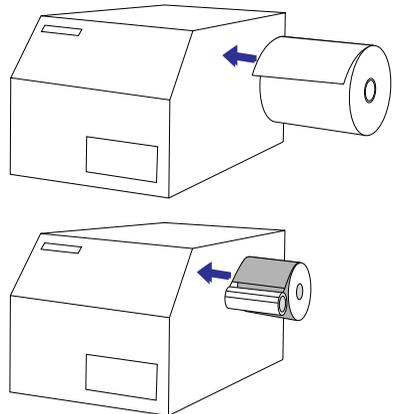

Load a new supply of media and ribbon, as described earlier in this manual.

Media Jams

Should a media jam occur in the print mechanism, proceed this way to clear it:

- Always switch off the power before starting to clear the jammed media.
- Raise the printhead and pull out the media.
- If the media has been wound up or has stuck on the platen roller, carefully remove it by hand without using any sharp tools that can damage the delicate platen roller or printhead. Avoid rotating the platen roller.



Caution

If you must pull away the media by force causing the platen roller to rotate, it is very important that the power has been off for a minute or more. If not, the electronics can be damaged beyond repair.

- Cut off any damaged or wrinkled part.
- Check if there is any adhesive somewhere in the print mechanism, clean using a cleaning card or cotton swab soaked in isopropyl alcohol.



Warning

Isopropyl alcohol [(CH₃)₂CHOH; CAS 67-63-0] is a highly flammable, moderately toxic, and mildly irritating substance.

- Reload the media as described in Chapter 4.
- Switch on the power.
- Readjust the media feed by pressing the <Feed/Pause> key.



11 Adjustments

This chapter describes how the operator can adjust the printer. The chapter covers the following topics:

- Narrow media adjustment
- Label stop sensor position adjustment
- Printhead pressure adjustment
- Ribbon break shaft adjustment

Narrow Media Adjustment

The printer is factory-adjusted for full-size media width. When using media less than full width, it is recommended that you adjust the position of the pressure arm so it becomes centered with the media. Thereby, an even pressure across the media is obtained.


A poorly adjusted pressure arm may be detected by a weaker printout on either side of the media path.

To adjust the pressure arm, proceed as follows:

- Loosen the knurled nut that holds the pressure arm. Move the arm inwards or outwards until the arrow on the tip of the arm becomes centered with the media.

While moving the arm, push at the part where the screw is situated, not at the tip. If the arm is hard to move, lift the printhead and pull the printhead bracket free from the magnet in the arm.

- After having centered the arm, lock it by tightening the nut.
- Remember to adjust all edge guides too.

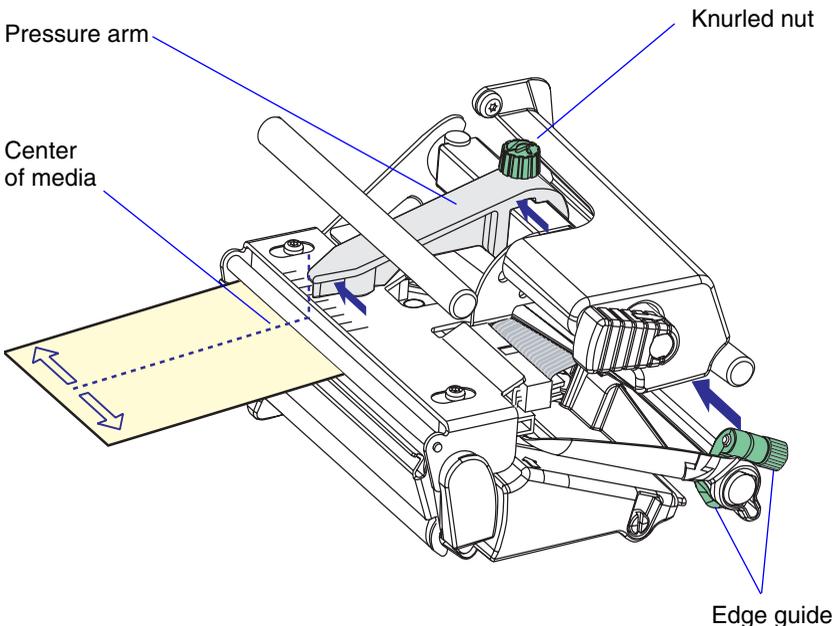


Label Stop Sensor Position Adjustment

The label stop/black mark sensor (LSS) is a photoelectric sensor that controls the printer's media feed by detecting gaps between labels, or slots or black marks in continuous stock, depending on the printer's setup in regard of media type (see Chapter 6, "Setting Up the Printer"). An obvious prerequisite is that the LSS must be aligned with the gaps, slots, or black marks. If using irregularly shaped labels, align the LSS with the front tips of the labels.

The LSS can be moved laterally from the inner edge of the media path and 57 mm (2.24 inches) outwards, which corresponds to the centerline of full width media. There is one part of the sensor on top of the upper media guide and another part underneath the lower guide. Using a straight-slot screwdriver, turn the adjustment screw until the point of detection on the upper sensor becomes aligned with the center of the slots or marks in the media, when you look into the print mechanism from the front with the printhead lifted.

- Rotate the screw clockwise to move the sensor towards the center section.
- Rotate the screw counterclockwise to move the sensor outwards, away from the center section.

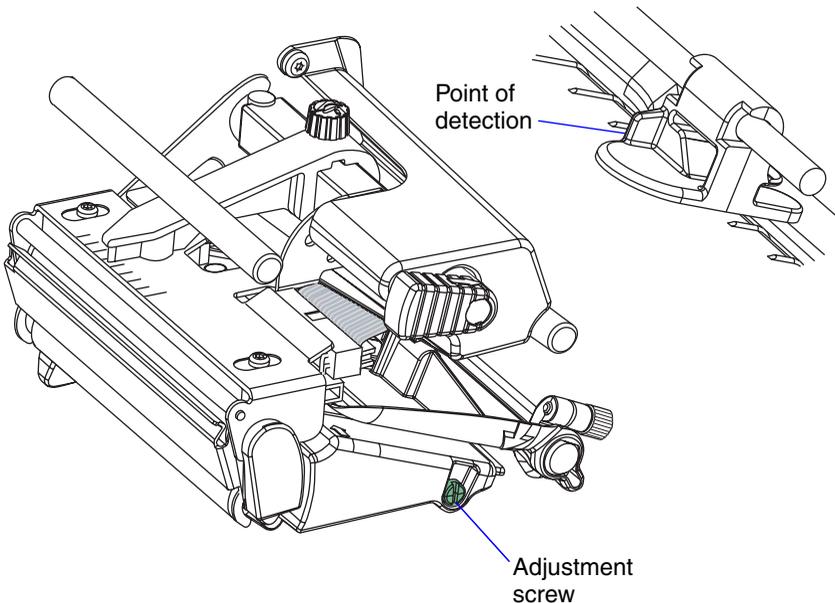

Printhead Pressure


The pressure of the thermal printhead against the direct thermal media is factory-adjusted. However, the use of thicker or thinner media than normal could require the printhead pressure to be readjusted.

Using a straight-slot screwdriver, turn the adjustment screw clockwise for more pressure (+) or counterclockwise for less pressure (-). Print a few labels, preferably test labels (see Chapter 6, “Setting Up the Printer”) and check the printout. Increased pressure generally gives a darker printout and vice versa. Repeat until the desired result is obtained.

To return to the factory setting, tighten the screw (+) as far as it goes and then loosen it (-) four full turns.



Do not use a higher printhead pressure than necessary, because it may increase the wear of the printhead and shorten its life.

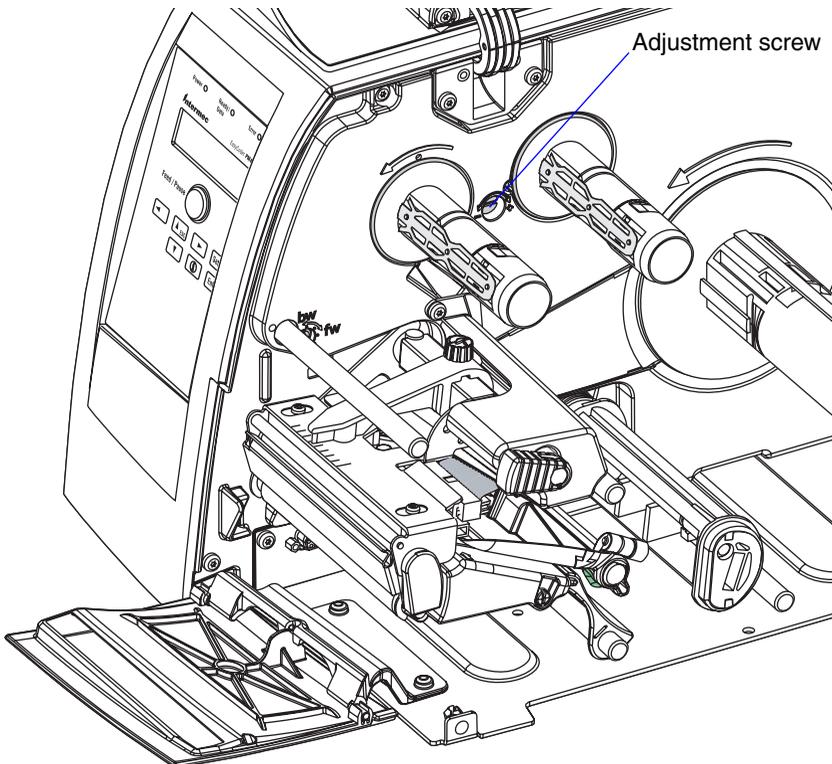

Ribbon Break Shaft

If ribbon wrinkling occurs, you may need to adjust the alignment of the front ribbon break shaft so that it runs parallel to the printhead and the ribbon supply and rewind hubs. The adjustment is done using a straight-slot screw that is located immediately behind the front ribbon break shaft.


- If the ribbon tends to slide outwards, turn the screw carefully clockwise (fw) to move the outer end of the break shaft forward.
- If the ribbon tends to slide inwards, turn the screw carefully counter-clockwise (bw) to move the outer end of the break shaft backward.




Caution

Before readjusting the break shaft, make sure that there is no other cause for the wrinkling of the ribbon. (See Chapter 9, “Troubleshooting.”)

Adjustment
screw

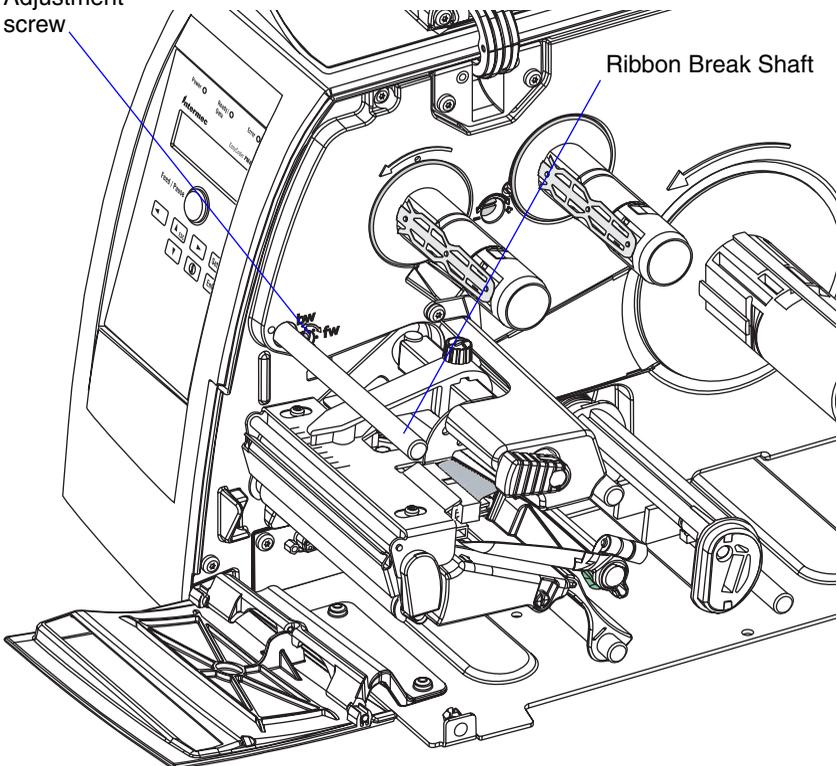

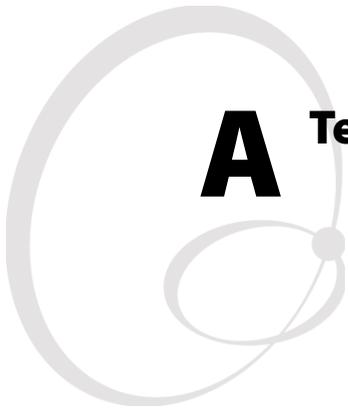

A **Technical Data**

This appendix lists the technical data for the printer. Please note that Intermec reserves the right to change without prior notice and that this information does not represent a commitment on the part of Intermec.

Appendix A—Technical Data

| Printing | | |
|------------------------------------|---|-------------------------------------|
| Print Technique | Direct Thermal and Thermal Transfer | |
| Printhead Resolution | 8 dots/mm (203.2 dpi) | |
| Print Speed (variable) | 100 to 200 mm/sec. (\approx 4 to 8 in./sec.) | |
| Print Width (max) | 104 mm (4.095 in.) | |
| Print Length (max) | 32767 dots = 409.5 cm (161.25 in.) ¹ | |
| Media Width (min/max) | 25 to 114.3 mm (1 to 4.5 in.) | |
| Media Roll Diameter (max) | 213 mm (8.38 in.) | |
| Media Roll Core Diameter | 38 to 40 mm (1.5 in.) or 76 mm (3 in.) | |
| Ribbon Width (min/max) | 25 to 110 mm (1 to 4.33 in.) | |
| Ribbon Roll Diameter (outer), max. | 82 mm (3.2 in.) | \approx 450 m (1475 ft) of ribbon |
| Ribbon Roll Core Diameter (inner) | 25.4 mm (1.00 inches) | |
| Print Directions | 4 | |
| Modes of Operation | | |
| Tear-Off (Straight-through) | Yes | |
| Peel-Off (Self-strip) | Option | |
| Cut-Off | Option | With cutter |
| Firmware | | |
| Operating System | IPL v2.10 | |
| Smooth Fonts | 13 scaleable + 21 simulated bitmap | |
| Resident bar codes (std) | 31 | |
| Physical Measures | | |
| Dimensions (W x L x H) | 298 x 543 x 261 mm (11.7 x 21.4 x 10.3 in) | |
| Weight (excluding media) | 13.5 kg (30 pounds) | |
| Ambient Operating Temperature | +5°C to +40°C (+41°F to +104°F) | |
| Humidity | 20 to 80% non-condensing | |
| Electronics | | |
| Microprocessor | 32 bit RISC | |
| On-board Flash SIMMs | 2 sockets for 4MB or 8MB each | Std. 1 x 4MB |
| On-board SDRAM SIMM | 1 socket for 8 MB or 16 Mb | Std. 8MB |


| Power Supply | | |
|---|-------------------------------|-------------------------------------|
| AC Voltage | 90 to 265 VAC, 45 to 65 Hz | |
| PFC Regulation | IEC 61000-3-2 | |
| Power Consumption | Standby 15W; Peak 300W | |
| Sensors | | |
| Label Gap/Black Mark/ Out of Media | Yes | Variable position |
| Printhead Lifted | Yes | |
| Ribbon End/Ribbon Low | Yes | |
| Media Low | Option | |
| Controls | | |
| Control Lamps | 3 | |
| Display | 2 x 16 character LCD | Background light |
| Keyboard | 7 keys membrane-switch type | |
| Feed/Pause button | 1 | |
| Beeper | Yes | |
| Data Interfaces | | |
| Serial | 1 x RS-232 | |
| Connection for Optional Interface Boards | 1 + 2 | 1 for EasyLAN 2 for other boards |
| Finisher Interface | 1 | For cutter etc. |
| Memory Card Adapter | 1 | CompactFlash cards |
| Accessories and Options | | |
| Special Printheads | 8 dots/mm (202.3 dpi): 1 type | Thick media |
| Integral Self-strip Unit with Liner Takeup | Option | For peel-off operation |
| Rotating Media Supply Hub | Option | Replaces supply post |
| 3-inch Adapter for Media | Option | Supply hub only |
| Media Roll Retainer | Option | Supply hub only |
| Internal Fan-fold Guide | Option | |
| Side Door with Keylock | Option | |

Appendix A—Technical Data

| | | |
|--------------------------------|--------|-----------|
| Cutter and Tray | Option | |
| Label Taken Sensor | Option | |
| RS-232 Cable | Option | |
| Parallel Interface Cable | Option | |
| Parallel Interface Board | Option | IEEE 1284 |
| EasyLAN Ethernet Interface | Option | |
| EasyLAN Wireless Interface | Option | |
| External Alphanumeric Keyboard | Option | |
| CompactFlash Cards | Option | 8MB-1GB |

¹/. The max. print length is also restricted by the amount of free SDRAM memory.


²/. Latin, Greek, and Cyrillic fonts according to Unicode standard are included.

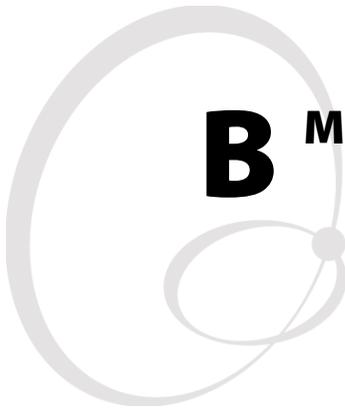

B Media Specifications

This appendix specifies the physical measures for various types of media.

Media Roll Size

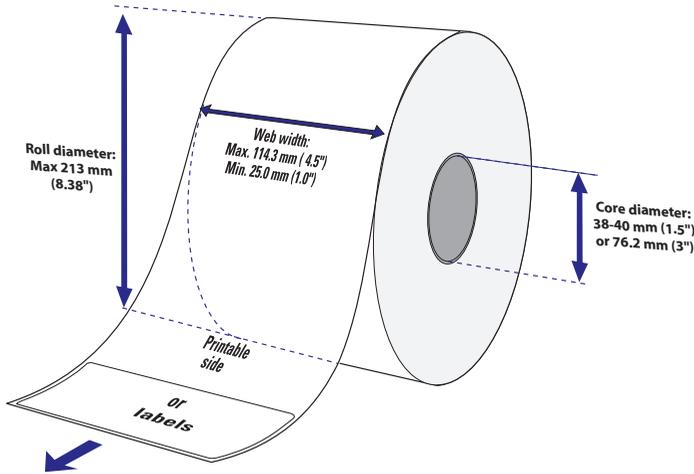

Core

Diameters: 38-40 mm (1.5 inches) or 76.2 mm (3 inches)
Width: Must not protrude outside the media.



Caution

The media must be wound up on the core in such a way that the printer can pull the end free.

Roll

| | | |
|-------------------------------|----------|---------------|
| Max. diameter: | 213 mm | (8.38 inches) |
| Max. width: | 114.3 mm | (4.50 inches) |
| Min. width (standard): | 25 mm | (1.00 inches) |
| Min. width (fan-fold guides): | 40 mm | (1.57 inches) |

The maximum recommended media thickness is 175 μ m (7 mils) with the standard printhead or 220 μ m (8.7 mils) with a special printhead. Thicker media may be used, but print quality will be reduced. The stiffness is also important and must be balanced against thickness to maintain print quality.

Media rolls to be loaded inside the printer should be wound with the printable side facing outwards.

The media supply must not be exposed to dust, sand, grit, etc. Any hard particles, however small, can damage the printhead.

Media

Non-Adhesive Strip

⇐ a ⇒ Media Width

Maximum: 114.3 mm (4.50 inches)

Minimum: 25.0 mm (1.00 inches)

Media Type Setup

- Fix length strip
- Var length strip



Self-Adhesive Strip

⇐ **a** ⇒ Media Width (including liner)

Maximum: 114.3 mm (4.50 inches)

Minimum: 25.0 mm (1.00 inches)

⇐ **b** ⇒ Liner

The liner must not extend more than a total of 1.6 mm (0.06 inches) outside the face material and should protrude equally on both sides.

⇐ **c** ⇒ Media Width (excluding liner)

Maximum: 112.7 mm (4.43 inches)

Minimum: 23.8 mm (0.94 inches)

Media Type Setup

- Fix length strip
- Var length strip



Self-Adhesive Labels

← a ⇒ Media Width (including liner)

Maximum: 114.3 mm (4.50 inches)

Minimum: 25.0 mm (1.00 inches)

← b ⇒ Liner

The backing paper must not extend more than a total of 1.6 mm (0.06 inches) outside the labels and should protrude equally on both side. Recommended minimum transparency: 40% (DIN 53147).

← c ⇒ Label Width (excluding liner)

Maximum: 112.7 mm (2.30 inches)

Minimum: 23.8 mm (0.94 inches)

← d ⇒ Label Length

Maximum: depends on SDRAM size

Minimum: 8.0 mm (0.32 inches)

Under ideal circumstances, a minimum label length of 4 mm (0.16 inches) could be used. It requires the sum of the label length (d) and the label gap (e) to be larger than 7 mm (0.28 inches), that batch printing is used, and that no pull back of the media is performed. Intermec does not guarantee that such short labels will work, but it is up to the user to test this in his unique application.

← e ⇒ Label Gap

Maximum: 21.3 mm (0.83 inches)


Recommended: 3.0 mm (0.12 inches)

Minimum: 1.2 mm (0.05 inches)

The Label Stop Sensor must be able to detect the extreme front edges of the labels.

Media Type Setup

- Label (w gaps)

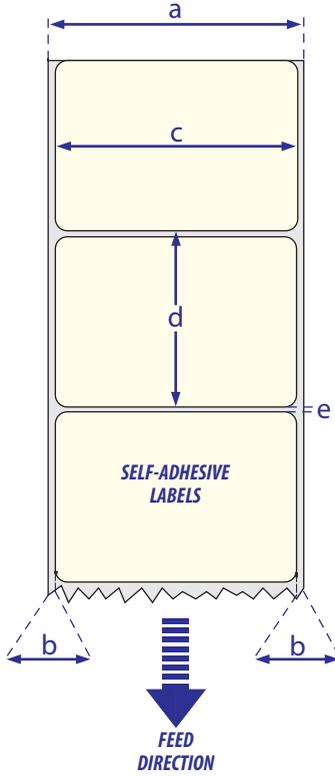

Tickets with Gaps

⇐ a ⇒ Media Width

| | |
|----------|------------------------|
| Maximum: | 114.3 mm (4.50 inches) |
| Minimum: | 25.0 mm (1.00 inches) |

⇐ b ⇒ Copy Length

| | |
|----------------------------|-----------------------|
| Max. length between slots: | depends on SDRAM size |
| Min. length between slots: | 8.0 mm (0.32 inches) |

Under ideal circumstances, a minimum ticket length of 4 mm (0.16 inches) could be used. It requires the sum of the copy length (b) and the detection slit height (e) to be larger than 7 mm (0.28 inches), that batch printing is used, and that no pull back of the media is performed. Intermec does not guarantee that such short tickets will work, but it is up to the user to test this in his unique application.

⇐ c ⇒ LSS Detection Position

Variable, see Chapter 11.

⇐ d ⇒ Detection Slit Length

The length of the detection slit (excluding corner radii) must be minimum 2.5 mm (0.10 inches) on either side of the LSS detection position (e).

⇐ e ⇒ Detection Slit Height

| | |
|--------------|-----------------------|
| Maximum: | 21.3 mm (0.83 inches) |
| Recommended: | 1.6 mm (0.06 inches) |
| Minimum: | 1.2 mm (0.05 inches) |


Media Type Setup

- Ticket (w gaps)



Note: Do not allow any perforation to break the edge of the media as this may cause the media to split and jam the printer.

Appendix B—Media Specifications

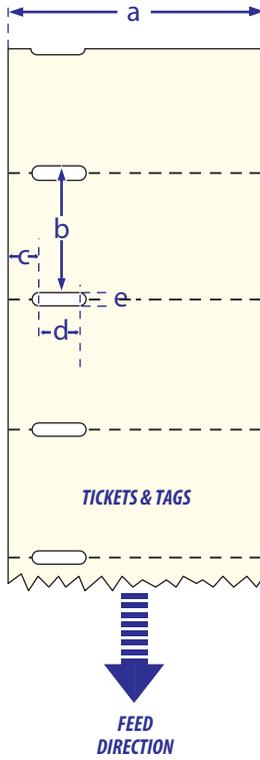

Tickets with Black Mark

← a ⇒ Media Width

| | |
|----------|------------------------|
| Maximum: | 114.3 mm (4.50 inches) |
| Minimum: | 25.0 mm (1.00 inches) |

← b ⇒ Copy Length

| | |
|----------|-----------------------|
| Minimum: | 20.0 mm (0.8 inches) |
| Maximum: | depends on SDRAM size |

← c ⇒ LSS Detection Position

Variable, see Chapter 11.

← d ⇒ Black Mark Width

The detectable width of the black mark should be at least 5.0 mm (0.2 inches) on either side of the LSS detection point.

← e ⇒ Black Mark Length

| | |
|----------|-----------------------|
| Maximum: | 21.3 mm (0.83 inches) |
| Common: | 12.5 mm (0.5 inches) |
| Minimum: | 5.0 mm (0.2 inches) |

← f ⇒ Black Mark Y-Position

It is recommended that you place the black mark as close to the front edge of the ticket as possible and use a negative Stop Adjust value to control the media feed, so the tickets can be properly torn off.

Media Type Setup

- Ticket (w mark)





Note: Preprint that may interfere with the detection of the black mark should be avoided.



Note: The black mark should be non-reflective carbon black on a whitish background. Do not allow any perforations to break the edge of the media as this may cause the media to split and jam the printer.

Appendix B—Media Specifications

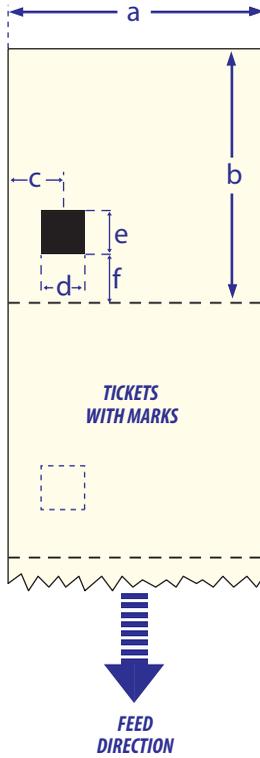

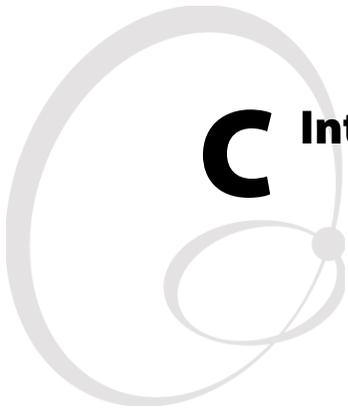

C Interfaces

This appendix describes the interface connectors found on the printer's rear plate. It covers the following topics:

- RS-232 interface
- Optional interface boards

RS-232 Interface

Protocol


Default setup:

- Baud rate: 9600
- Char. length 8 bits
- Parity: None
- Stop bits: 1
- RTS/CTS Disabled
- ENQ/ACK: Disabled
- XON/XOFF: Disabled (both ways)
- New Line: CR/LF

To change the RS-232 interface settings, see Chapter 6, “Setting Up the Printer.”

Signals on printer's serial port "uart1:"

| DB-9 | Signal | Meaning |
|------|--------|---------------------|
| 1 | | External +5V DC* |
| 2 | TXD | Transmit data |
| 3 | RXD | Recieve data |
| 4 | DSR | Data set ready |
| 5 | GND | Ground |
| 6 | DTR | Data terminal ready |
| 7 | CTS | Clear to send |
| 8 | RTS | Request to send |
| 9 | – | Not used |

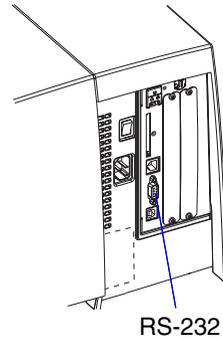

*/. The external +5V is limited to 500 mA and is automatically switched off at overload.

Interface Cable

- Computer end: Depends on computer model
- Printer end: DB-9pin plug


Optional Interfaces

The printer can optionally be fitted with an IEEE 1284 Parallel Interface Board at the right-hand side of the printer's rear plate.


Regardless of if any Parallel Interface Board is installed, the printer can also be fitted with one of the following EasyLAN interface boards for connection to a Local Area Network (LAN):

- EasyLAN Ethernet Interface
- EasyLAN Wireless Interface

IEEE 1284 Parallel Interface Board

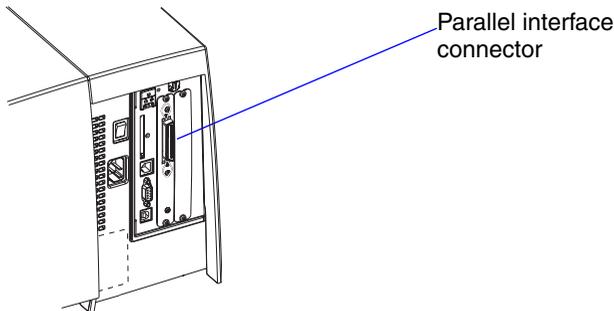


EasyLAN Ethernet Interface

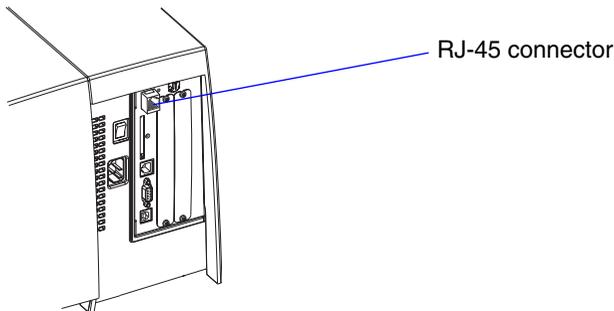

Appendix C—Interfaces

EasyLAN Wireless Interface

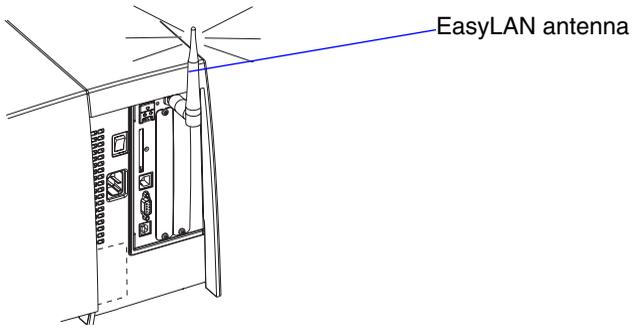



D Supported IPL Commands


This appendix lists the IPL commands supported by the printer in alphabetic order. For more information on the commands, refer to the *IPL Programming, Reference Manual*.

| IPL Command | Syntax |
|---|---------------|
| Abort Print Job | |
| Access to Control Panel, Enable or Disable | <SI>A |
| Advanced Mode, Select | <ESC>C |
| Alphanumeric Field Separator | <GS> |
| Amount of Storage, Define | <SI>N |
| Audible Alarm, Enable or Disable | <SI>a |
| Auto-Transmit 1, Enable | <ESC>j |
| Auto-Transmit 2, Enable | <ESC>d |
| Auto-Transmit 3, Enable | <ESC>e |
| Auto-Transmit 1, 2, and 3, Disable | <ESC>k |
| Bar Code, Select Type | c |
| Bar Code Field, Create or Edit | B |
| Batch Count, Set | <US> |
| Bitmap Cell Height for Graphic or UDF, Define | y |
| Bitmap Cell Width for Graphic or UDF, Define | x |
| Bitmap User-Defined Font, Clear or Define | T |
| Border Around Human-Readable Text, Define | b |
| Box Field, Create or Edit | W |
| Character Bitmap Origin Offset, Define | X |
| Character Rotation or Bar Code Ratio, Define | r |
| Clear All Data | <CAN> |
| Clear Data From Current Field | |
| Code 39 Prefix Character, Define | p |
| Command Tables, Load | C |
| Command Terminator | ; |
| Command Terminator 1 | <NUL> |
| Command Terminator 2 | <LF> |
| Communication Port Configuration, Set | <SI>P |
| Configuration Parameters, Transmit | <ESC>p |
| Current Edit Session, Save | N |
| Cut | <SO> |
| Cutter, Enable or Disable | <SI>c |
| Dark Adjust | K |
| Dark Adjust, Set | <SI>d |
| Data Shift - International Characters | <SUB> |
| Data Source for Format in a Page, Define | e |
| Direct Graphics Mode, Select | <ESC>g |
| Emulation Mode, Enter | <ESC>c |
| Emulation or Advanced Mode on Power-Up | <SI>C |
| End-of-Print Skip Distance, Set | <SI>D |

| IPL Command | Syntax |
|--|---------------|
| Error Code, Request | <BEL> |
| Factory Defaults, Reset | D |
| Field, Delete | D |
| Field, Select | <ESC>F |
| Field Data, Define Source | d |
| Field Decrement, Set | <ESC>D |
| Field Direction, Define | f |
| Field Increment, Set | <ESC>I |
| Field Origin, Define | o |
| First Data Entry Field, Select | <ACK> |
| Font, Transmit | <ESC>v |
| Font Character Width, Define | Z |
| Font Type, Select | c |
| Form Feed | <FF> |
| Format, Create or Edit | A or F |
| Format Direction in a Page, Define | q |
| Format, Erase | E |
| Format, Select | <ESC>E |
| Format, Transmit | <ESC>x |
| Format Direction in a Page, Define | g |
| Format Offset Within a Page, Define | O |
| Format Position From Page, Delete | m |
| Format Position in a Page, Assign | M |
| Formats, Print | f |
| Graphic Type, Select | c |
| Graphic or UDC, Define | u |
| Hardware Configuration Label, Print | h |
| Height Magnification of Bar, Box, or UDC, Define | h |
| Human-Readable Field, Create or Edit | H |
| IBM Language Translation, Enable or Disable | <SI>i |
| Increment and Decrement, Disable | <ESC>N |
| Intercharacter Space for UDF, Define | z |
| Interpretive Field, Edit | I |
| Interpretive Field, Enable or Disable | i |
| Label and Gap Length, Transmit | <ESC>L |
| Label Path Open Sensor Value, Transmit | L |
| Label Rest Point, Adjust | <SI>f |
| Label Retract, Enable or Disable | <SI>R |
| Label Retract Distance, Set | <SI>r |
| Label Stock Type, Select | <SI>T |

| IPL Command | Syntax |
|--|---------------|
| Label Taken Sensor Value, Transmit | T |
| Length of Line or Box Field, Define | l |
| Line Field, Create or Edit | L |
| Maximum Label Length, Set | <SI>L |
| Media Fault Recovery Mode, Set | <SI>e |
| Media Sensitivity, Select | <SI>g |
| Memory Usage, Transmit | <ESC>m |
| Next Data Entry Field, Select | <CR> |
| Number of Image Bands, Set | <SI>I |
| Numeric Field Separator | <FS> |
| Options Selected, Transmit | <ESC>O |
| Outline Font, Clear or Create | J |
| Outline Font, Download | j |
| Page, Create or Edit | S |
| Page, Delete | s |
| Page, Select | <ESC>G |
| Page, Transmit | <ESC>y |
| Pages, Print | p |
| Pitch Label, Print | C |
| Point Size, Set | k |
| Postamble, Set | <EOT> |
| Preamble, Set | <SOH> |
| Print | <ETB> |
| Print Line Dot Count Limit, Set | v |
| Print Quality Label, Print | Q |
| Print Speed, Set | <SI>S |
| Printer Language, Select | <SI>I |
| Printhead Loading Mode, Select | <SI>h |
| Printhead Parameters, Transmit | <ESC>H |
| Program Mode, Enter | <ESC>P |
| Program Mode, Exit | R |
| Program Number, Transmit | <ESC>M |
| Quantity Count, Set | <RS> |
| Reflective Sensor Value, Transmit | M |
| Remaining Quantity and Batch Count, Transmit | <ESC>Q |
| Reset | <DLE> |
| Self-Strip, Enable or Disable | <SI>t |
| Slashed Zero, Enable or Disable | <SI>z |
| Software Configuration Label, Print | s |
| Start and Stop Codes (Code 39), Print | <ESC><SP> |

| IPL Command | Syntax |
|---|---------------|
| Status Dump | <VT> |
| Status Enquiry | <ENQ> |
| Test and Service Mode, Enter | <ESC>T |
| Test and Service Mode, Exit | R |
| Top of Form, Set | <SI>F |
| Transmissive Sensor Value, Transmit | G |
| User-Defined Characters (UDC) and Graphics, Print | g |
| User-Defined Character, Clear or Create | G |
| User-Defined Character Field, Create or Edit | U |
| User-Defined Characters, Transmit | <ESC>u |
| User-Defined Font Character, Create | t |
| User-Defined Fonts, Print | t |
| Warm Boot | <BS> |
| Width of Line, Box, Bar, or Character, Define | w |

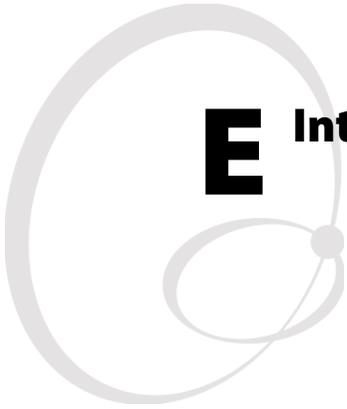

E Intermec Supplies

This appendix describes the supplies offered by Intermec for use with this printer, that is, direct thermal media, thermal transfer ribbons, and receiving face materials for thermal transfer printing.

Direct Thermal Media

Intermec offers two quality grades of **direct thermal** media for the Easy-Coder printers:

Premium Quality

Top-coated media with high demands on printout quality and resistance against moisture, plasticisers, and vegetable oils. Examples:

Europe

Thermal Top Board
Thermal Top
Thermal Top High Speed

North America

Duratherm II
Duratherm II Tag
Duratherm Lightning
Duratherm Lightning Plus
Duratherm IR

Economy Quality

Non top-coated media with less resistance to moisture, plasticisers, and vegetable oils. In all other respects, it is equal to Premium Quality. Examples:

Europe

Thermal Eco
Thermal Eco Board

North America

—

Thermal Transfer Media

Intermec offers stock labels for thermal transfer printing in a wide range of quality grades.

Uncoated Papers

Economical high-volume printing. To be used with GP/TMX 1500 ribbons. Examples:

Europe

TTR Uncoated

North America

—

Coated Papers

Various coat-weight, smoothness, and gloss. To be used with HP/TMX 2200/TMX 2500 and GP/TMX 1500 ribbons. Examples:

Europe

TTR Coated

TTR Premium

TTR Premium Board

TTR High Gloss White

North America

Duratron II

Duratron II Tag

Valeron Tag

Polyethylene Plastics

These media have better resistance to water and many common chemicals than uncoated and coated papers. They can be use outdoors and offer good tear resistance. Most often used with HP/TMX 2200/TMX 2500 ribbons. Examples:

Europe

TTR Polyethylene

TTR Gloss Polyethylene

North America

Kimdura

Syntran

Polyesters

These media give high resistance to chemicals, heat, and mechanical abrasion with HR/TMX 3200 ribbons. Examples:

Europe

TTR High Gloss Polyester

North America

PET Gloss

Transfer Ribbons

Intermec offer three ranges of thermal transfer ribbons optimized for different purposes:

- **General Purpose (GP/TMX 1500)** transfer ribbons allow high speed printing and give a good printout, but are somewhat sensitive to smearing. They may be the best choice for uncoated and coated papers.
- **High Performance (HP/TMX 2200, TMX 2500)** transfer ribbons allow high speed printing and give a highly readable and defined printout on most face materials with smooth surfaces. They have good “smear resistance” and are most suitable for intricate logotypes and images on matte-coated papers and synthetic face materials.
- **High Resistance (HR/TMX 3200)** transfer ribbons give an extremely durable printout, which is resistant to most chemical agents and high temperatures. However, such transfer ribbons set high demands on the receiving face material, which must be very smooth, such as polyesters.

The use of HR/TMX 3200 ribbons requires the print speed and the energy supplied by the printhead to be controlled with great accuracy according to the receiving face material. Custom-made setup options adapted for special applications can also be created. Consult your Intermec distributor.




Note: Intermec thermal transfer ribbons are engineered specifically for the EasyCoder printheads.

Setting the Media Sensitivity Number

Media sensitivity is important because you use it to optimize print quality and print speed. The three-digit sensitivity specifies the amount of heat required by the printhead to image a label. The amount of heat that each roll of media or ribbon requires is unique due to different chemistries and manufacturing processes.

Intermec has developed heating schedules (the amount of heat required to image a label) to produce the highest possible print quality for Intermec media and ribbon combinations on Intermec printers. Look for the three-digit media sensitivity number on:

- The side of the media roll. Use the last three digits (140 in the example below) of the 15-digit number stamped on the roll for the media sensitivity number.
- A small label attached to the roll of media.
- A small label attached to the plastic bag of your ribbon roll.

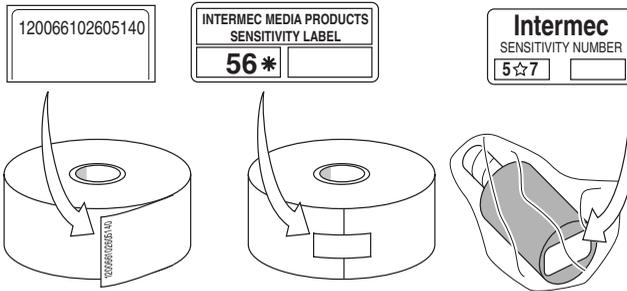

Use this three-digit number to optimize print quality and print speed on your printer. You can achieve the best print quality on the printer by using Intermec ribbon and media products.

The default printer setting for direct thermal media is 420. For thermal transfer media, the default setting is 567. Use the information on the packaging that you saved when loading media and ribbon to determine the correct sensitivity number.

Use the Setup Mode (see “Sensitivity” in Chapter 6-7), PrintSet, your third-party software, or the Intermec printer language (IPL) command set to change the media sensitivity number. For help on how to set the media sensitivity number using the printer command set, see the DOS example on the following page.

Appendix E—Intermec Supplies

The sensitivity number on each roll of thermal transfer media or ribbon has an asterisk (*) in place of one of the digits. To optimize the sensitivity number for thermal transfer media, you combine the digits as in this example.

| Media or Ribbon | Sensitivity Rating | Description |
|-------------------------|--------------------|---|
| Thermal transfer media | 56* | The asterisk for the third digit is reserved to identify the ribbon's sensitivity number. |
| Thermal transfer ribbon | 5*7 | The asterisk for the second digit is reserved to identify the media's sensitivity number. |
| | 567 | Optimum sensitivity rating |

To set the sensitivity rating for direct thermal media, use the three-digit sensitivity rating located on the roll of media or listed later in this chapter.

Use DOS to set the media sensitivity number on a PC like this:

1. At the DOS prompt, type the following command and press Enter:

```
MODE COM1 96,E,7,1,N
```

2. Type the following command lines and press Enter:

```
COPY CON COM1
```

```
<STX><SI>g1,567<ETX>^Z
```

where:

```
<SI>g1,567 sets the media sensitivity number to 567.
```

Direct Thermal Media Sensitivity Settings

| Approximate Sensitivity Ratings | Setting | Direct Thermal Media |
|---------------------------------|---------|----------------------------|
| 400 Series Medium Sensitivity | 480 | Duratherm Lightning IR Tag |
| | 470 | Duratherm Lightning-2 |
| | 460 | European IR |
| | 450 | Duratherm IR Lightning-1 |
| | 440 | European Thermal |
| | 420 | Duratherm Lightning-1 |
| 100 Series Low Sensitivity | 180 | Duratherm Lightning II-1 |
| | 170 | European Tag |
| | 160 | Duratherm II Tag |
| | 140 | European Top |
| | 130 | Duratherm II-2 |

Thermal Transfer Media and Ribbon Sensitivity Settings

| Approximate Sensitivity Ratings | Setting | Media/Ribbon Stock |
|---|---------|---|
| 800 Series High Sensitivity (Paper) | 864 | European Uncoated/Standard |
| 600 Series Medium Sensitivity (Plastic) | 687 | Duratran TTR Poly. or Valeron/ Premium-3/6/7 |
| | 677 | Duratran Syntran/Premium-3/6/7 |
| | 633 | European Polyethylene/Premium |
| | 627 | Duratran Kimdura/Premium-3/6/7 |
| | 623 | European Duratran Kimdura/ Premium |
| 500 Series Medium Sensitivity (Paper) | 567 | Duratran II-1/Premium-3/6/7 |
| | 527 | Duratran II Tag-7mil/ Premium-3/6/7 |
| | 513 | European Coated/Premium |
| 300 Series Low Sensitivity (Plastic) | 366 | Super Prem. Poly./Super Prem.-7 |



Intermec Printer AB

Idrottsvägen 10, P.O. Box 123
S-431 22 Mölndal, Sweden

tel +46 31 869500

fax +46 31 869595

www.intermec.com

EasyCoder PM4i Bar Code Label Printer, User's Guide (IPL Version)



1-960584-01